

Notes:	
√	Functions is fully supported and already existed in former software version.
※	Functions is fully supported and newly added in current software version.
Number	Index number of the special function , you can find the name from the special function table.
	Functions is not supported.

Vehicle	System	Ecu Info.	Read Codes	Erase Codes	Live data	Freez Frame	Active Test	Special Function
ALASKAN	Injection	√	√	√	√	√	√	0580, 0482, 0559, 0438, 0558, 0836, 0417, 0838, 0837, 0839, 0551, 0771, 0513, 0450, 0570, 0580, 0505, 0428, 0562, 0561, 0541, 0563, 0544, 0565, 0589, 0438
ALASKAN	Anti-lock Brake System(ABS)	√	√	√	√			0417
ALASKAN	Instrument Panel	√	√	√	√			0417
ALASKAN	UCH	√	√	√	√	√		0417
ALASKAN	Airbag / Pretensioners(SRS)	√	√	√	√	√		0422, 0423
ALASKAN	Front Radar	√	√	√	√			0417
ALASKAN	Air Conditioning(AC)	√	√	√	√			0417
ALASKAN	Automatic Gearbox(AT)	√	√	√	√			0417
ALASKAN	Communications Unit	√	√	√	√			0420
ALASKAN	UPC	√	√	√	√			0417
ALASKAN	Laser Radar	√	√	√	√	√		0421
ALASKAN	Differential Lock	√	√	√	√			0420
ALASKAN	Around View Monitoring	√	√	√	√			0417
ALASKAN	4 Wheels Drive(4WD)	√	√	√	√			0416
ALASKAN	Parking PROX CAN	√	√	√	√			0419
ALASKAN	PTC Heater Control Unit	√	√	√	√			0417
ALASKAN	Urea Dosing Control Module	√	√	√	√	√	√	0424, 0432, 0447, 0461, 0466, 0474, 0607, 0613, 0623, 0632, 0641, 0650, 0662, 0669, 0675
ALASKAN	Energy Control Unit	√	√	√	√			0418
ALPINE A110	Injection	√	√	√	√	√	√	0289, 0428, 0529, 0531, 0567, 0580, 0840, 0841, 0845, 0846, 0852
ALPINE A110	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0428, 0486, 0490, 0492, 0498, 0507, 0510, 0515, 0621, 0649, 0658, 0786, 0800, 0802, 0805
ALPINE A110	UCH	√	√	√	√	√	√	0107, 0327, 0358, 0385, 0428
ALPINE A110	Airbag / Pretensioners(SRS)	√	√	√	√		√	0372, 0428, 0645, 0660
ALPINE A110	Air Conditioning(AC)	√	√	√	√		√	0428, 0625, 0634
ALPINE A110	Automatic Gearbox(AT)	√	√	√	√	√	√	0461, 0519, 0666, 0748
ALPINE A110	VARIABLE P.A.S.	√	√	√	√	√	√	0428
ALPINE A110	UPC	√	√	√	√		√	0457, 0648, 0651

ALPINE A110	Adaptation Unit	√	√	√	√			0200, 0202, 0440
ALPINE A110	Parking PROX CAN	√	√	√	√		√	0003, 0045, 0071, 0077, 0428
ALPINE A110	Telematic CTRL Unit	√	√	√	√		√	0426, 0452
ALPINE A110	Hands - Fress Module	√	√	√	√	√	√	0128, 0428
ALPINE A110	Communications Unit	√	√	√				0461, 0468
AVANTIME	Injection	√	√	√				
AVANTIME	Anti-lock Brake System(ABS)	√	√	√				
AVANTIME	Instrument Panel	√	√	√				
AVANTIME	UCH	√	√	√				
AVANTIME	Airbag / Pretensioners(SRS)	√	√	√				
AVANTIME	Air Conditioning(AC)	√	√	√				
AVANTIME	Automatic Gearbox(AT)	√	√	√				
AVANTIME	Lighting	√	√	√				
AVANTIME	Discharge Lamp	√	√	√				
AVANTIME	Heater	√	√	√				
CAPTUR - KAPTUR BR - IN - RU	Injection	√	√	√	√	√	√	0580, 0537, 0836, 0835, 0838, 0837, 0839, 0771, 0551, 0531, 0553, 0574, 0428, 0598, 0513, 0579, 0534, 0776, 0450, 0580, 0428, 0505, 0464, 0541, 0544, 0543, 0840, 0568, 0743, 0567, 0842
CAPTUR - KAPTUR BR - IN - RU	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0490, 0492, 0658, 0649, 0428, 0507, 0498, 0486, 0621, 0786, 0428, 0658, 0787
CAPTUR - KAPTUR BR - IN - RU	Instrument Panel	√	√	√	√		√	0292, 0428, 0093, 0231, 0245, 0093, 0292, 0345, 0248
CAPTUR - KAPTUR BR - IN - RU	UCH	√	√	√	√	√	√	0327, 0767, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0107, 0358, 0523
CAPTUR - KAPTUR BR - IN - RU	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0703, 0174, 0660, 0428, 0645
CAPTUR - KAPTUR BR - IN - RU	Air Conditioning(AC)	√	√	√	√		√	0428, 0433, 0634
CAPTUR - KAPTUR BR - IN - RU	Automatic Gearbox(AT)	√	√	√	√	√	√	0713, 0517, 0769, 0518, 0461, 0461, 0674, 0761, 0467, 0511, 0702
CAPTUR - KAPTUR BR - IN - RU	UPC	√	√	√	√		√	0149, 0162, 0457, 0494, 0648, 0651
CAPTUR - KAPTUR BR - IN - RU	4 Wheels Drive(4WD)	√	√	√	√	√	√	0624, 0428, 0014, 0654, 0611
CAPTUR - KAPTUR BR - IN - RU	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
CAPTUR - KAPTUR BR - IN - RU	Hands - Fress Module	√	√	√	√	√	√	0128, 0428
CAPTUR - KAPTUR BR - IN - RU	RADIO	√	√	√	√		√	0182, 0087, 0452, 0176, 0087, 0112, 0182, 0469, 0622
CAPTUR - KAPTUR BR - IN - RU	Multimedia Interface	√	√	√	√		√	0428

CAPTUR - KAPTUR BR - IN - RU	Amplifier	√	√	√	√		√	0048, 0469
CAPTUR - KAPTUR BR - IN - RU	Lighting	√	√	√	√		√	0428, 0612
CAPTUR - QM3 - KABIN	Injection	√	√	√	√	√	√	0580, 0582, 0581, 0819, 0450, 0537, 0538, 0617, 0771, 0573, 0572, 0531, 0575, 0574, 0530, 0577, 0535, 0579, 0534, 0590, 0471, 0580, 0548, 0547, 0428, 0505, 0549, 0626, 0827, 0829, 0828, 0584, 0583, 0102, 0542, 0586, 0585, 0464, 0541, 0544, 0588, 0543, 0587, 0546, 0560, 0284, 0482, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0550, 0553, 0555, 0830, 0554, 0598, 0513, 0556, 0450, 0571, 0570, 0602, 0847, 0529, 0848, 0608, 0562, 0561, 0564, 0841, 0566, 0565, 0840, 0521,
CAPTUR - QM3 - KABIN	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787
CAPTUR - QM3 - KABIN	Instrument Panel	√	√	√	√		√	0292, 0428, 0093, 0231, 0245, 0093, 0292, 0345, 0248
CAPTUR - QM3 - KABIN	UCH	√	√	√	√	√	√	0767, 0107, 0327, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0327, 0107, 0358, 0523
CAPTUR - QM3 - KABIN	Airbag / Pretensioners(SRS)	√	√	√	√		√	0660, 0428, 0645
CAPTUR - QM3 - KABIN	Air Conditioning(AC)	√	√	√	√		√	0625, 0428, 0428, 0433, 0642, 0634, 0625
CAPTUR - QM3 - KABIN	Automatic Gearbox(AT)	√	√	√	√	√	√	0461, 0493, 0461, 0504, 0757, 0748, 0758, 0519, 0454, 0454, 0511, 0752, 0502, 0656, 0755, 0666
CAPTUR - QM3 - KABIN	VARIABLE P.A.S.	√	√	√	√	√	√	0428
CAPTUR - QM3 - KABIN	UPC	√	√	√	√		√	0457, 0149, 0648, 0162, 0494, 0651, 0457
CAPTUR - QM3 - KABIN	Parking PROX CAN	√	√	√	√		√	0614, 0428, 0071, 0082, 0003, 0045, 0077
CAPTUR - QM3 - KABIN	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
CAPTUR - QM3 - KABIN	Hands - Fress Module	√	√	√	√	√	√	0128, 0428
CAPTUR - QM3 - KABIN	Communications Unit	√	√	√	√		√	0017, 0129, 0159, 0161, 0437, 0461
CAPTUR - QM3 - KABIN	Multimedia Interface	√	√	√	√		√	0428
CAPTUR - QM3 - KABIN	Amplifier	√	√	√	√		√	0048, 0469
CAPTUR - QM3 - KABIN	Lighting	√	√	√	√		√	0428, 0612

CLIO 2	Injection	√	√	√	√		√	0428, 0471, 0667, 0690
CLIO 2	Anti-lock Brake System(ABS)	√	√	√				
CLIO 2	UCH	√	√	√				
CLIO 2	Airbag / Pretensioners(SRS)	√	√	√				
CLIO 2	Air Conditioning(AC)	√	√	√				
CLIO 2	Automatic Gearbox(AT)	√	√	√				
CLIO 2	Engine(petrol)	√	√	√				
CLIO II p2 - 3 - 4	Injection	√	√	√	√		√	0428, 0471, 0667, 0690
CLIO II p2 - 3 - 4	Anti-lock Brake System(ABS)	√	√	√				
CLIO II p2 - 3 - 4	UCH	√	√	√				
CLIO II p2 - 3 - 4	Airbag / Pretensioners(SRS)	√	√	√				
CLIO II p2 - 3 - 4	Air Conditioning(AC)	√	√	√				
CLIO II p2 - 3 - 4	Automatic Gearbox(AT)	√	√	√				
CLIO II p2 - 3 - 4	Engine(petrol)	√	√	√				
CLIO II p2 - 3 - 4	VARIABLE P.A.S.	√	√	√				
CLIO II p2 - 3 - 4	Lighting	√	√	√				
CLIO II p2 - 3 - 4	Discharge Lamp	√	√	√				
CLIO II Ph 6	Injection	√	√	√	√	√	√	0428, 0529, 0450, 0771, 0482, 0531, 0553, 0428, 0535, 0524
CLIO II Ph 6	Anti-lock Brake System(ABS)	√	√	√	√		√	0428, 0631, 0649, 0658
CLIO II Ph 6	UCH	√	√	√	√		√	0428, 0267, 0352, 0267, 0428
CLIO II Ph 6	Airbag / Pretensioners(SRS)	√	√	√	√			0137, 0299, 0300, 0302, 0341, 0347, 0348, 0372, 0428, 0645, 0660
CLIO II Ph 6	Tracker	√	√	√	√			0012, 0415, 0428
CLIO III	Injection	√	√	√	√	√	√	0482, 0834, 0438, 0833, 0536, 0539, 0538, 0617, 0771, 0531, 0530, 0535, 0832, 0534, 0776, 0831, 0690, 0450, 0471, 0482, 0602, 0528, 0428, 0626, 0505, 0529, 0608, 0540, 0542, 0464, 0541, 0544, 0667, 0524, 0537
CLIO III	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0745, 0649, 0428, 0738, 0451, 0428, 0631, 0741, 0766, 0658
CLIO III	UCH	√	√	√	√		√	0271, 0095, 0273, 0053, 0053, 0095, 0218, 0107, 0118, 0209, 0428, 0067, 0320, 0099, 0121, 0114, 0213, 0138, 0710
CLIO III	Airbag / Pretensioners(SRS)	√	√	√	√			0064, 0361, 0317, 0319, 0341, 0353, 0330, 0332, 0334, 0315, 0314, 0070, 0074, 0296, 0295, 0372, 0668, 0329, 0428, 0056, 0364, 0341, 0363, 0660, 0645, 0369
CLIO III	Air Conditioning(AC)	√	√	√	√		√	0106, 0157, 0225, 0428
CLIO III	Automatic Gearbox(AT)	√	√	√	√		√	0461, 0692, 0461, 0702, 0713, 0429, 0719, 0674, 0443, 0454, 0467, 0488, 0697, 0666
CLIO III	VARIABLE P.A.S.	√	√	√	√			0428, 0639, 0630, 0428
CLIO III	UPC	√	√	√	√		√	0428

CLIO III	Tyres	√	√	√	√			0042, 0440, 0740
CLIO III	Lighting	√	√	√	√		√	0428, 0014, 0040, 0043, 0023, 0033, 0018, 0612
CLIO III	Communications Unit	√	√	√	√		√	0437, 0129, 0606, 0150, 0461, 0110, 0110, 0132, 0156, 0129
CLIO III	RADIO	√	√	√	√		√	0452, 0622
CLIO III	Multimedia Interface	√	√	√	√		√	0014, 0049, 0051, 0059, 0072, 0428
CLIO III	Multimedia Connection	√	√	√	√			0013, 0428, 0606
CLIO III	Parking Assistance	√	√	√	√			0614, 0428, 0041, 0003, 0045, 0003, 0614
CLIO IV	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0428, 0486, 0490, 0492, 0507, 0621, 0649, 0658, 0786, 0787
CLIO IV	Instrument Panel	√	√	√	√		√	0292, 0428, 0093, 0231, 0245, 0093, 0292, 0345, 0248
CLIO IV	UCH	√	√	√	√	√	√	0107, 0327, 0767, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0767, 0327, 0358, 0523
CLIO IV	Airbag / Pretensioners(SRS)	√	√	√	√		√	0660, 0428, 0645
CLIO IV	Air Conditioning(AC)	√	√	√	√		√	0625, 0428, 0428, 0433, 0642, 0634, 0625
CLIO IV	Automatic Gearbox(AT)	√	√	√	√	√	√	0461, 0493, 0461, 0504, 0757, 0748, 0758, 0519, 0454, 0454, 0511, 0752, 0502, 0656, 0755, 0666
CLIO IV	VARIABLE P.A.S.	√	√	√	√	√	√	0428
CLIO IV	UPC	√	√	√	√		√	0457, 0149, 0648, 0162, 0494, 0651, 0149, 0457
CLIO IV	Parking PROX CAN	√	√	√	√		√	0614, 0428, 0071, 0082, 0003, 0045, 0077
CLIO IV	RADIO	√	√	√	√		√	0182, 0087, 0452, 0176, 0465, 0112, 0182, 0469, 0622
CLIO IV	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
CLIO IV	Hands - Fress Module	√	√	√	√	√	√	0128, 0428
CLIO IV	Communications Unit	√	√	√	√		√	0017, 0129, 0159, 0161, 0437, 0461
CLIO IV	Multimedia Interface	√	√	√	√		√	0428
CLIO IV	Amplifier	√	√	√	√		√	0048, 0469
CLIO IV	Lighting	√	√	√	√		√	0428, 0612
CLIO V6	Injection	√	√	√				
CLIO V6	UCH	√	√	√				
CLIO V6	Air Conditioning(AC)	√	√	√				
CLIO V6 ph 2	Injection	√	√	√				
CLIO V6 ph 2	UCH	√	√	√				
CLIO V6 ph 2	Airbag / Pretensioners(SRS)	√	√	√				
CLIO V6 ph 2	Air Conditioning(AC)	√	√	√				

DOKKER - KANGOO	Injection	√	√	√	√	√	√	0580, 0582, 0581, 0819, 0537, 0538, 0288, 0617, 0771, 0573, 0572, 0531, 0575, 0574, 0530, 0577, 0535, 0579, 0534, 0590, 0593, 0471, 0592, 0580, 0548, 0547, 0428, 0505, 0549, 0626, 0827, 0829, 0828, 0584, 0583, 0102, 0542, 0586, 0585, 0464, 0541, 0544, 0588, 0543, 0587, 0546, 0589, 0560, 0284, 0482, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0550, 0594, 0553, 0597, 0596, 0555, 0830, 0599, 0554, 0598, 0513, 0556, 0237, 0450, 0571, 0570, 0602, 0847, 0529, 0848, 0608, 0562, 0561, 0564, 0841, 0566, 0565, 0840, 0521, 0843, 0568, 0524,
DOKKER - KANGOO	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0490, 0649, 0492, 0498, 0486, 0428, 0621, 0787
DOKKER - KANGOO	Instrument Panel	√	√	√	√		√	0292, 0093, 0262, 0093, 0292, 0825, 0428, 0254, 0264, 0245, 0278, 0321, 0255, 0346, 0678, 0248
DOKKER - KANGOO	UCH	√	√	√	√	√	√	0107, 0327, 0767, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0767, 0327, 0358, 0523
DOKKER - KANGOO	Airbag / Pretensioners(SRS)	√	√	√	√		√	0660, 0428, 0645
DOKKER - KANGOO	VARIABLE P.A.S.	√	√	√	√			0428, 0639
DOKKER - KANGOO	RADIO	√	√	√	√		√	0182, 0087, 0452, 0176, 0465, 0112, 0182, 0469, 0622
DOKKER - KANGOO	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
DOKKER - KANGOO	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803
DOKKER - KANGOO	Hands - Fress Module	√	√	√	√	√	√	0128, 0428
DOKKER - KANGOO	Multimedia Interface	√	√	√	√		√	0428
DUSTER	Automatic Gearbox(AT)	√	√	√	√		√	0461, 0467, 0674, 0702, 0713
DUSTER	4 Wheels Drive(4WD)	√	√	√	√	√	√	0624, 0428, 0014, 0014, 0654, 0624, 0611
DUSTER	RADIO	√	√	√	√		√	0081, 0087, 0707, 0452, 0465, 0112, 0469, 0081, 0622
DUSTER	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0503, 0649, 0428, 0631
DUSTER	UCH	√	√	√	√		√	0428, 0267, 0352, 0267, 0428
DUSTER	Airbag / Pretensioners(SRS)	√	√	√	√			0137, 0166, 0168, 0169, 0173, 0299, 0300, 0302, 0317, 0319, 0341, 0353, 0356, 0357, 0366, 0367, 0372, 0428, 0645, 0660
DUSTER	VARIABLE P.A.S.	√	√	√	√			0639, 0428
DUSTER	Tracker	√	√	√	√			0012, 0415, 0428

DUSTER ph2	Injection	√	√	√	√	√	√	0580, 0482, 0537, 0438, 0558, 0836, 0835, 0838, 0837, 0839, 0771, 0551, 0531, 0553, 0575, 0574, 0555, 0598, 0513, 0579, 0237, 0534, 0776, 0556, 0590, 0450, 0570, 0580, 0505, 0428, 0562, 0561, 0464, 0541, 0544, 0543, 0840, 0565, 0568, 0843, 0743, 0567, 0842, 0428
DUSTER ph2	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787
DUSTER ph2	Instrument Panel	√	√	√	√		√	0093, 0245, 0248, 0254, 0255, 0264, 0278, 0292, 0321, 0428, 0678, 0825
DUSTER ph2	UCH	√	√	√	√	√	√	0107, 0327, 0767, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0767, 0327, 0358, 0523
DUSTER ph2	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0703, 0174, 0660, 0428, 0645
DUSTER ph2	Air Conditioning(AC)	√	√	√	√		√	0428, 0433, 0634
DUSTER ph2	Automatic Gearbox(AT)	√	√	√	√	√	√	0713, 0517, 0769, 0518, 0461, 0461, 0674, 0761, 0467, 0511, 0702
DUSTER ph2	VARIABLE P.A.S.	√	√	√	√			0428, 0639
DUSTER ph2	4 Wheels Drive(4WD)	√	√	√	√	√	√	0624, 0428, 0014, 0654, 0611
DUSTER ph2	RADIO	√	√	√	√		√	0182, 0087, 0452, 0176, 0465, 0112, 0182, 0469, 0622
DUSTER ph2	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
DUSTER ph2	Multimedia Interface	√	√	√	√		√	0428
DUSTER ph3	Injection	√	√	√	√	√	√	0580, 0537, 0836, 0835, 0838, 0837, 0839, 0771, 0551, 0550, 0531, 0553, 0574, 0598, 0513, 0579, 0535, 0534, 0776, 0450, 0482, 0580, 0428, 0505, 0529, 0464, 0541, 0544, 0543, 0840, 0568, 0743, 0567, 0842
DUSTER ph3	Anti-lock Brake System(ABS)	√	√	√	√	√	√	
DUSTER ph3	Instrument Panel	√	√	√	√	√	√	0093, 0231, 0241, 0245, 0246, 0248, 0292, 0428
DUSTER ph3	UCH	√	√	√	√	√	√	0107, 0327, 0407, 0428, 0516, 0084, 0509, 0053, 0385, 0378, 0138
DUSTER ph3	Airbag / Pretensioners(SRS)	√	√	√	√		√	
DUSTER ph3	Air Conditioning(AC)	√	√	√	√		√	
DUSTER ph3	Automatic Gearbox(AT)	√	√	√	√	√	√	0713, 0517, 0769, 0518, 0461, 0461, 0674, 0761, 0467, 0511, 0702
DUSTER ph3	Communications Unit	√	√	√	√	√	√	0461, 0437, 0468
DUSTER ph3	Blind Spot Detection	√	√	√	√		√	0428
DUSTER ph3	VARIABLE P.A.S.	√	√	√	√	√		0428, 0684, 0684, 0428
DUSTER ph3	UPC	√	√	√	√		√	0514, 0648, 0651, 0754
DUSTER ph3	4 Wheels Drive(4WD)	√	√	√	√	√	√	
DUSTER ph3	RADIO	√	√	√	√		√	0182, 0087, 0452, 0176, 0087, 0465, 0112, 0182, 0469, 0622
DUSTER ph3	Telematic CTRL Unit	√	√	√	√			0426, 0452, 0458, 0709, 0725, 0732

DUSTER ph3	Urea Dosing Control Module	√	√	√	√	√	√	0801, 0803, 0461, 0484, 0795, 0794, 0797, 0799
DUSTER ph3	Hands - Fress Module	√	√	√	√	√	√	0117, 0126, 0128, 0133, 0428
DUSTER ph3	Around View Monitoring	√	√	√	√		√	0428, 0434
DUSTER ph3	Central GateWay	√	√	√	√	√		0004, 0428
DUSTER ph3	Multimedia Interface	√	√	√	√		√	0428
ESPACE	Injection	√	√	√				
ESPACE	Anti-lock Brake System(ABS)	√	√	√				
ESPACE	Instrument Panel	√	√	√				
ESPACE	UCH	√	√	√				
ESPACE	Airbag / Pretensioners(SRS)	√	√	√				
ESPACE	Air Conditioning(AC)	√	√	√				
ESPACE	Automatic Gearbox(AT)	√	√	√				
ESPACE	Lighting	√	√	√				
ESPACE	Discharge Lamp	√	√	√				
ESPACE	Heater	√	√	√				
ESPACE IV	Injection	√	√	√	√		√	0450, 0681, 0482, 0471, 0681, 0438, 0822, 0115, 0771, 0652, 0123, 0115, 0524, 0776
ESPACE IV	Instrument Panel	√	√	√	√		√	0261, 0260, 0241, 0270, 0239, 0635, 0254, 0231, 0253, 0255, 0258, 0259, 0270, 0093, 0291, 0250, 0272, 0252, 0251, 0428, 0231, 0243, 0287, 0242, 0245, 0244, 0148, 0247, 0246, 0249, 0248
ESPACE IV	Automatic Gearbox(AT)	√	√	√	√		√	0674, 0467, 0429, 0722
ESPACE IV	Anti-lock Brake System(ABS)	√	√	√	√		√	0490, 0492, 0186, 0185, 0186, 0490, 0658, 0649, 0428, 0738, 0760, 0187, 0762, 0486, 0631, 0741
ESPACE IV	UCH	√	√	√	√		√	0080, 0280, 0062, 0240, 0053, 0218, 0134, 0236, 0138, 0193, 0195, 0095, 0293, 0197, 0274, 0053, 0130, 0080, 0207, 0107, 0206, 0228, 0428, 0067, 0441, 0661, 0121, 0104, 0203, 0269, 0224, 0268, 0127, 0204
ESPACE IV	Airbag / Pretensioners(SRS)	√	√	√	√			0668, 0428, 0372, 0372, 0660, 0668, 0645
ESPACE IV	Air Conditioning(AC)	√	√	√	√		√	0106, 0208, 0219, 0428, 0184, 0220, 0223, 0222, 0214, 0225, 0226
ESPACE IV	Gas Injection	√	√	√	√		√	0049, 0428
ESPACE IV	Discharge Lamp	√	√	√	√		√	0005, 0428, 0030, 0030
ESPACE IV	Parking Assistance	√	√	√	√			0614, 0428, 0041, 0003, 0045, 0003, 0614
ESPACE IV	Heater	√	√	√	√		√	0427, 0439, 0461

ESPACE V	Injection	√	√	√	√	√	√	0580, 0617, 0771, 0531, 0535, 0579, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0542, 0541, 0783, 0544, 0589, 0482, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0428, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0648, 0568, 0842, 0567, 0842, 0600
ESPACE V	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787
ESPACE V	UCH	√	√	√	√	√	√	0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358
ESPACE V	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0372, 0660, 0645
ESPACE V	Front Radar	√	√	√	√	√		0428
ESPACE V	Air Conditioning(AC)	√	√	√	√		√	0428, 0433, 0634
ESPACE V	Automatic Gearbox(AT)	√	√	√	√	√	√	0748, 0519, 0461, 0461, 0750, 0748, 0763, 0666
ESPACE V	Gas Injection	√	√	√	√	√		0428, 0714, 0720, 0731
ESPACE V	VARIABLE P.A.S.	√	√	√	√	√		0428
ESPACE V	UPC	√	√	√	√		√	0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754
ESPACE V	Power Back Door	√	√	√	√			0009, 0428
ESPACE V	4 Wheels Steering	√	√	√	√	√	√	0636, 0627, 0428
ESPACE V	Parking PROX CAN	√	√	√	√		√	
ESPACE V	Gearbox Elec Control	√	√	√	√	√	√	0428, 0616
ESPACE V	Piloted Suspension	√	√	√	√	√		0440
ESPACE V	Driver's Seat	√	√	√	√		√	0428, 0663, 0673, 0676
ESPACE V	Front Camera	√	√	√	√			0005, 0068, 0428
ESPACE V	RADIO	√	√	√	√		√	0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469
ESPACE V	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
ESPACE V	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803
ESPACE V	Left - Hand Door or Passenger Seat	√	√	√	√		√	0428, 0633, 0647, 0653
ESPACE V	Right - Hand Door or Collapsible Seat	√	√	√	√		√	0428
ESPACE V	Head up Display	√	√	√			√	0428
ESPACE V	Multimedia Interface	√	√	√			√	0437
ESPACE V	Amplifier	√	√	√	√		√	0060, 0428, 0456
ESPACEIV ph2 - 3 - 4	Injection	√	√	√	√	√	√	0681, 0482, 0471, 0450, 0438, 0558, 0771, 0551, 0770, 0652, 0115, 0532, 0513, 0535, 0534, 0776, 0471, 0428, 0505, 0542, 0541, 0123, 0544, 0687, 0840

ESPACEIV ph2 - 3 - 4	Instrument Panel	√	√	√	√		√	0270, 0291, 0093, 0250, 0272, 0241, 0093, 0270, 0428, 0318, 0243, 0254, 0287, 0231, 0253, 0245, 0255, 0321, 0148, 0247, 0246
ESPACEIV ph2 - 3 - 4	Automatic Gearbox(AT)	√	√	√	√		√	0429, 0493, 0674, 0467, 0429, 0722
ESPACEIV ph2 - 3 - 4	VARIABLE P.A.S.	√	√	√	√	√		0428, 0644
ESPACEIV ph2 - 3 - 4	Lighting	√	√	√	√		√	0428, 0063, 0014, 0040, 0054, 0065, 0023, 0612, 0018
ESPACEIV ph2 - 3 - 4	Parking PROX CAN	√	√	√	√			0003, 0041, 0045, 0047, 0057, 0428, 0614, 0649
ESPACEIV ph2 - 3 - 4	Communications Unit	√	√	√	√		√	0014, 0428, 0437, 0449, 0628
ESPACEIV ph2 - 3 - 4	RADIO	√	√	√	√		√	0090, 0109, 0452, 0452, 0430, 0622
ESPACEIV ph2 - 3 - 4	Multimedia Interface	√	√	√	√		√	0437, 0428, 0049, 0014
ESPACEIV ph2 - 3 - 4	Multimedia Connection	√	√	√	√			0013, 0428, 0606
ESPACEIV ph2 - 3 - 4	Anti-lock Brake System(ABS)	√	√	√	√		√	
ESPACEIV ph2 - 3 - 4	UCH	√	√	√	√		√	0053, 0062, 0067, 0080, 0095, 0104, 0107, 0121, 0130, 0134, 0138, 0193, 0195, 0197, 0203, 0206, 0207, 0218, 0224, 0228, 0236, 0240, 0268, 0274, 0280, 0293, 0428, 0441, 0661
ESPACEIV ph2 - 3 - 4	Airbag / Pretensioners(SRS)	√	√	√	√			
ESPACEIV ph2 - 3 - 4	Air Conditioning(AC)	√	√	√	√		√	
ESPACEIV ph2 - 3 - 4	Parking Assistance	√	√	√	√			0614, 0428, 0041, 0003, 0045, 0003, 0614
ESPACEIV ph2 - 3 - 4	Heater	√	√	√	√		√	0427, 0439, 0461
KADJAR	Injection	√	√	√	√	√	√	0580, 0450, 0617, 0771, 0531, 0575, 0574, 0535, 0579, 0590, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0829, 0542, 0541, 0783, 0544, 0589, 0482, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0830, 0598, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0840, 0568, 0843, 0524, 0567, 0614, 0666
KADJAR	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787
KADJAR	Instrument Panel	√	√	√	√		√	0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248
KADJAR	UCH	√	√	√	√	√	√	0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358
KADJAR	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0372, 0660, 0645
KADJAR	Front Radar	√	√	√	√			0428
KADJAR	Automatic Gearbox(AT)	√	√	√	√	√	√	0504, 0757, 0748, 0758, 0519, 0454, 0461, 0493, 0461, 0752, 0755, 0666

KADJAR	Gas Injection	√	√	√	√	√		0428, 0714, 0720, 0731
KADJAR	VARIABLE P.A.S.	√	√	√	√	√		0428
KADJAR	UPC	√	√	√	√		√	0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754
KADJAR	4 Wheels Drive(4WD)	√	√	√	√			0428
KADJAR	Parking PROX CAN	√	√	√	√		√	
KADJAR	Front Camera	√	√	√	√			0005, 0428, 0068
KADJAR	RADIO	√	√	√	√		√	0182, 0172, 0087, 0182, 0090, 0452, 0176, 0465, 0179, 0487, 0112, 0178, 0469, 0622, 0779
KADJAR	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
KADJAR	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803
KADJAR	Multimedia Interface	√	√	√	√		√	0469, 0609, 0448, 0469
KADJAR	Amplifier	√	√	√	√		√	0060, 0428, 0456
KADJAR CN	Injection	√	√	√	√	√	√	0845, 0428, 0846, 0580, 0529, 0771, 0531, 0288, 0428, 0840, 0845, 0567
KADJAR CN	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787
KADJAR CN	Instrument Panel	√	√	√	√		√	0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248
KADJAR CN	UCH	√	√	√	√	√	√	0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358
KADJAR CN	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0372, 0660, 0645
KADJAR CN	Air Conditioning(AC)	√	√	√	√		√	0428, 0433, 0634
KADJAR CN	Automatic Gearbox(AT)	√	√	√	√			
KADJAR CN	Gas Injection	√	√	√	√	√		0428, 0714, 0720, 0731
KADJAR CN	VARIABLE P.A.S.	√	√	√	√	√		0428
KADJAR CN	UPC	√	√	√	√		√	0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754
KADJAR CN	4 Wheels Drive(4WD)	√	√	√	√			0428
KADJAR CN	Parking PROX CAN	√	√	√	√		√	
KADJAR CN	Front Camera	√	√	√	√			0005, 0068, 0428
KADJAR CN	RADIO	√	√	√	√		√	0182, 0172, 0087, 0182, 0090, 0452, 0176, 0179, 0465, 0487, 0112, 0178, 0469, 0779, 0622
KADJAR CN	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
KADJAR CN	Amplifier	√	√	√	√		√	0060, 0428, 0456
KANGOO	Injection	√	√	√	√		√	0428, 0471, 0667, 0690
KANGOO	Anti-lock Brake System(ABS)	√	√	√				
KANGOO	UCH	√	√	√				
KANGOO	Airbag / Pretensioners(SRS)	√	√	√				
KANGOO	Air Conditioning(AC)	√	√	√				
KANGOO	Automatic Gearbox(AT)	√	√	√				
KANGOO	Engine(petrol)	√	√	√				

KANGOO	Supervisor or DCDC	√	√	√				
KANGOO	Inverter	√	√	√				
KANGOO	Heater	√	√	√				
KANGOO II	Injection	√	√	√	√	√	√	0690, 0438, 0537, 0834, 0833, 0536, 0539, 0538, 0617, 0771, 0531, 0530, 0428, 0535, 0832, 0534, 0776, 0831, 0450, 0471, 0602, 0528, 0428, 0626, 0505, 0529, 0608, 0540, 0542, 0464, 0541, 0544, 0667, 0524
KANGOO II	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0492, 0490, 0658, 0745, 0649, 0428, 0079, 0738, 0507, 0793, 0498, 0762, 0079, 0486, 0621, 0786, 0631, 0741, 0785, 0796, 0787, 0798
KANGOO II	Instrument Panel	√	√	√	√		√	0180, 0340, 0262, 0020, 0093, 0812, 0339, 0811, 0338, 0816, 0815, 0818, 0817, 0254, 0253, 0297, 0135, 0255, 0139, 0810, 0337, 0655, 0152, 0180, 0789, 0428, 0705, 0264, 0665, 0820, 0680, 0276, 0672, 0792, 0231, 0278, 0036, 0678, 0290, 0093, 0291, 0294, 0809, 0646, 0804, 0806, 0243, 0245, 0247, 0246, 0688
KANGOO II	UCH	√	√	√	√	√	√	0390, 0393, 0395, 0336, 0428, 0508, 0342, 0397, 0388, 0508, 0354, 0398, 0401
KANGOO II	Airbag / Pretensioners(SRS)	√	√	√	√		√	0076, 0086, 0088, 0101, 0103, 0108, 0113, 0120, 0140, 0142, 0299, 0300, 0341, 0353, 0372, 0428, 0645, 0660
KANGOO II	Air Conditioning(AC)	√	√	√	√		√	0106, 0223, 0225, 0229, 0428
KANGOO II	Automatic Gearbox(AT)	√	√	√	√		√	0702, 0713, 0461, 0674, 0467
KANGOO II	VARIABLE P.A.S.	√	√	√	√			0183, 0428, 0630, 0639
KANGOO II	UPC	√	√	√	√		√	0428, 0640
KANGOO II	Tyres	√	√	√		√		0440
KANGOO II	Communications Unit	√	√	√	√		√	0437, 0129, 0606, 0461, 0110, 0110, 0132, 0154, 0156, 0129
KANGOO II	RADIO	√	√	√	√		√	0452, 0707, 0622
KANGOO II	Multimedia Interface	√	√	√	√		√	0049, 0051, 0059, 0072, 0428
KANGOO II	Multimedia Connection	√	√	√	√			0013, 0428, 0606
KANGOO II	Adaptation Unit	√	√	√	√			0428
KANGOO II	Parking Assistance	√	√	√	√			0428, 0041, 0003, 0045, 0003, 0428
KANGOO MUX	Injection	√	√	√	√		√	0428, 0471, 0667, 0690
KANGOO MUX	Anti-lock Brake System(ABS)	√	√	√				
KANGOO MUX	UCH	√	√	√				
KANGOO MUX	Airbag / Pretensioners(SRS)	√	√	√				
KANGOO MUX	Automatic Gearbox(AT)	√	√	√				
KANGOO MUX	Engine(petrol)	√	√	√				

KANGOO VLL	Injection	√	√	√	√	√	√	0529, 0450, 0771, 0482, 0531, 0553, 0428, 0535, 0524
KANGOO VLL	Anti-lock Brake System(ABS)	√	√	√	√		√	0428, 0631, 0649, 0658
KANGOO VLL	UCH	√	√	√	√		√	0352, 0428
KANGOO VLL	Airbag / Pretensioners(SRS)	√	√	√	√			0302, 0428, 0645, 0660, 0668
KANGOO VLL	VARIABLE P.A.S.	√	√	√	√			0428, 0639
KANGOO VLL	Tracker	√	√	√	√			0012, 0415, 0428
KANGOO ZE - StopStart - ph2	Injection	√	√	√	√	√	√	0580, 0581, 0819, 0537, 0288, 0771, 0573, 0572, 0531, 0575, 0530, 0574, 0535, 0579, 0534, 0590, 0593, 0471, 0592, 0580, 0428, 0505, 0827, 0828, 0584, 0583, 0542, 0586, 0541, 0585, 0544, 0588, 0543, 0589, 0560, 0482, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0550, 0594, 0597, 0596, 0555, 0599, 0554, 0598, 0513, 0556, 0450, 0571, 0570, 0847, 0529, 0848, 0562, 0561, 0564, 0841, 0521, 0565,
KANGOO ZE - StopStart - ph2	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0490, 0492, 0490, 0658, 0745, 0649, 0428, 0738, 0507, 0486, 0786, 0428, 0631, 0741, 0787
KANGOO ZE - StopStart - ph2	Instrument Panel	√	√	√	√		√	0780, 0093, 0290, 0812, 0811, 0672, 0231, 0297, 0775, 0678, 0810, 0655, 0290, 0291, 0093, 0809, 0646, 0428, 0705, 0243, 0782, 0264, 0245, 0784, 0665
KANGOO ZE - StopStart - ph2	UCH	√	√	√	√		√	0428, 0508, 0354, 0354, 0428
KANGOO ZE - StopStart - ph2	Air Conditioning(AC)	√	√	√	√		√	0625, 0106, 0428
KANGOO ZE - StopStart - ph2	Automatic Gearbox(AT)	√	√	√	√	√	√	0461, 0493, 0461, 0504, 0757, 0748, 0758, 0519, 0454, 0454, 0511, 0752, 0502, 0656, 0755, 0666
KANGOO ZE - StopStart - ph2	VARIABLE P.A.S.	√	√	√	√			0183, 0428, 0630, 0639
KANGOO ZE - StopStart - ph2	UPC	√	√	√	√		√	0141, 0494, 0715, 0671, 0693, 0751, 0698, 0158, 0499, 0457, 0677, 0494, 0141, 0648, 0747, 0428, 0706, 0749, 0682, 0640, 0664, 0686, 0689, 0744, 0501
KANGOO ZE - StopStart - ph2	Tyres	√	√	√	√	√		0440
KANGOO ZE - StopStart - ph2	Charge Controller	√	√	√	√	√		0428
KANGOO ZE - StopStart - ph2	Parking PROX CAN	√	√	√	√		√	0614, 0428, 0071, 0082, 0003, 0045, 0077

KANGOO ZE - StopStart - ph2	RADIO	√	√	√	√		√	0182, 0087, 0087, 0182, 0629, 0452, 0176, 0055, 0465, 0035, 0112, 0049, 0469, 0622, 0105
KANGOO ZE - StopStart - ph2	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
KANGOO ZE - StopStart - ph2	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803
KANGOO ZE - StopStart - ph2	BCB	√	√	√	√	√	√	0428
KANGOO ZE - StopStart - ph2	BMS	√	√	√	√	√		0701, 0428, 0445, 0428, 0455, 0620, 0701
KANGOO ZE - StopStart - ph2	EVC	√	√	√	√	√	√	0026, 0604, 0637, 0813, 0481, 0431, 0460, 0452, 0473, 0431, 0477, 0435
KANGOO ZE - StopStart - ph2	PEB	√	√	√	√	√		0442, 0428
KANGOO ZE - StopStart - ph2	BMS SAFETY	√	√	√	√	√		0428, 0619, 0428
KANGOO ZE - StopStart - ph2	Communications Unit	√	√	√	√		√	0017, 0090, 0129, 0437, 0606, 0161, 0461, 0159
KANGOO ZE - StopStart - ph2	Multimedia Interface	√	√	√	√		√	0428
KANGOO ZE - StopStart - ph2	Multimedia Connection	√	√	√	√			0428, 0437, 0606
KANGOO ZE - StopStart - ph2	Adaptation Unit	√	√	√	√			0428
KANGOO ZE - StopStart - ph2	Parking Assistance	√	√	√	√		√	0614, 0428, 0003, 0045, 0003, 0614
KANGOO ZE - StopStart - ph2	Heater	√	√	√	√			0427, 0439, 0461
KOLEOS - QM5	Injection	√	√	√	√	√	√	0471, 0681, 0808, 0526, 0525, 0814, 0428, 0527, 0807, 0771, 0495, 0428, 0532, 0821, 0776
KOLEOS - QM5	Anti-lock Brake System(ABS)	√	√	√	√		√	0428, 0774
KOLEOS - QM5	UCH	√	√	√	√	√	√	0080, 0360, 0062, 0350, 0053, 0218, 0107, 0327, 0349, 0428, 0265, 0496, 0355, 0134, 0189, 0277, 0227, 0127
KOLEOS - QM5	Airbag / Pretensioners(SRS)	√	√	√	√			0428
KOLEOS - QM5	Automatic Gearbox(AT)	√	√	√	√			0739, 0461, 0461, 0739
KOLEOS - QM5	Gas Injection	√	√	√	√	√	√	0049, 0428, 0444, 0694, 0704, 0711
KOLEOS - QM5	Blind Spot Detection	√	√	√	√		√	0007, 0428
KOLEOS - QM5	VARIABLE P.A.S.	√	√	√	√			0428
KOLEOS - QM5	UPC	√	√	√	√		√	0428
KOLEOS - QM5	Tyres	√	√	√	√	√	√	0052, 0440, 0683, 0440, 0052
KOLEOS - QM5	4 Wheels Drive(4WD)	√	√	√	√			0428
KOLEOS - QM5	Parking PROX CAN	√	√	√	√			0003, 0045, 0047, 0057, 0061, 0069, 0428, 0649
KOLEOS - QM5	Auto Front Lighting	√	√	√	√		√	0428, 0603
KOLEOS - QM5	Telematic CTRL Unit	√	√	√	√		√	0426, 0025, 0452

KOLEOS - QM5	Communications Unit	√	√	√	√		√	0129, 0437, 0428, 0181, 0606, 0461, 0110, 0110, 0014, 0145, 0147, 0437
KOLEOS - QM5	RADIO	√	√	√	√		√	0087, 0075, 0090, 0081, 0735, 0723, 0469, 0737, 0728, 0452, 0055, 0465, 0035, 0469, 0622
KOLEOS - QM5	Multimedia Interface	√	√	√	√		√	0428, 0014, 0051, 0021, 0021, 0049, 0059, 0029
KOLEOS - QM5	Amplifier	√	√	√	√		√	0016, 0048, 0428, 0456, 0622
KOLEOS - QM5	Multimedia Connection	√	√	√	√			0013, 0428, 0606
KOLEOS - QM5	Discharge Lamp	√	√	√	√		√	0679, 0659, 0428, 0670, 0708, 0428, 0679, 0700
KOLEOS II - QM6	Injection	√	√	√	√	√	√	0580, 0617, 0771, 0531, 0535, 0579, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0542, 0541, 0783, 0544, 0589, 0482, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0428, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0840, 0568, 0842, 0567, 0840, 0600
KOLEOS II - QM6	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787
KOLEOS II - QM6	UCH	√	√	√	√	√	√	0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358
KOLEOS II - QM6	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0372, 0660, 0645
KOLEOS II - QM6	Front Radar	√	√	√	√			0428
KOLEOS II - QM6	Air Conditioning(AC)	√	√	√	√		√	0428, 0433, 0634
KOLEOS II - QM6	Automatic Gearbox(AT)	√	√	√	√			
KOLEOS II - QM6	Gas Injection	√	√	√	√	√		0428, 0714, 0720, 0731
KOLEOS II - QM6	VARIABLE P.A.S.	√	√	√	√	√		0428
KOLEOS II - QM6	UPC	√	√	√	√		√	0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754
KOLEOS II - QM6	Power Back Door	√	√	√	√			0009, 0428
KOLEOS II - QM6	4 Wheels Drive(4WD)	√	√	√	√			0428
KOLEOS II - QM6	Parking PROX CAN	√	√	√	√		√	
KOLEOS II - QM6	Driver's Seat	√	√	√	√		√	0428
KOLEOS II - QM6	Front Camera	√	√	√	√	√		0657, 0428
KOLEOS II - QM6	RADIO	√	√	√	√		√	0172, 0087, 0087, 0090, 0779, 0179, 0465, 0487, 0112, 0178, 0475, 0469, 0779
KOLEOS II - QM6	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
KOLEOS II - QM6	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803
KOLEOS II - QM6	Left - Hand Door or Passenger Seat	√	√	√	√		√	0428
KOLEOS II - QM6	Multimedia Interface	√	√	√	√		√	0437, 0448, 0469
KOLEOS II - QM6	Amplifier	√	√	√	√		√	0060, 0428, 0456

KOLEOS II CN - QM6 CN	Injection	√	√	√	√	√	√	0428, 0529, 0531, 0567, 0580, 0840, 0845, 0846
KOLEOS II CN - QM6 CN	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0490, 0649, 0492, 0507, 0498, 0486, 0428, 0621, 0786, 0787
KOLEOS II CN - QM6 CN	Instrument Panel	√	√	√	√		√	0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248
KOLEOS II CN - QM6 CN	UCH	√	√	√	√	√	√	0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358
KOLEOS II CN - QM6 CN	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0372, 0660, 0645
KOLEOS II CN - QM6 CN	Front Radar	√	√	√	√			0428
KOLEOS II CN - QM6 CN	Air Conditioning(AC)	√	√	√	√		√	0428, 0433, 0634
KOLEOS II CN - QM6 CN	Automatic Gearbox(AT)	√	√	√	√			
KOLEOS II CN - QM6 CN	VARIABLE P.A.S.	√	√	√	√	√		0428
KOLEOS II CN - QM6 CN	UPC	√	√	√	√		√	0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754
KOLEOS II CN - QM6 CN	Power Back Door	√	√	√	√			0009, 0428
KOLEOS II CN - QM6 CN	4 Wheels Drive(4WD)	√	√	√	√			0428
KOLEOS II CN - QM6 CN	Parking PROX CAN	√	√	√	√		√	
KOLEOS II CN - QM6 CN	Driver's Seat	√	√	√	√		√	0428
KOLEOS II CN - QM6 CN	Front Camera	√	√	√	√			
KOLEOS II CN - QM6 CN	RADIO	√	√	√	√		√	0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469
KOLEOS II CN - QM6 CN	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
KOLEOS II CN - QM6 CN	Left - Hand Door or Passenger Seat	√	√	√	√		√	0428
KOLEOS II CN - QM6 CN	Multimedia Interface	√	√	√	√		√	0437
KOLEOS II CN - QM6 CN	Amplifier	√	√	√	√		√	0060, 0428, 0456
KWID	Injection	√	√	√	√	√	√	0450, 0582, 0482, 0582, 0450, 0438, 0844, 0529, 0771, 0531, 0553, 0840, 0851, 0535
KWID	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0428, 0507, 0649, 0658
KWID	Instrument Panel	√	√	√	√	√	√	0292, 0428, 0263, 0292, 0678
KWID	UCH	√	√	√	√	√	√	0428
KWID	Airbag / Pretensioners(SRS)	√	√	√	√		√	0703, 0428, 0174, 0660, 0428, 0645

KWID	VARIABLE P.A.S.	√	√	√	√			0428
KWID	RADIO	√	√	√	√		√	0087, 0465, 0112, 0469, 0622
KWID BR	Injection	√	√	√	√	√	√	0450, 0582, 0482, 0582, 0450, 0844, 0529, 0771, 0531, 0553, 0840, 0851, 0535
KWID BR	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0649, 0507, 0428
KWID BR	Instrument Panel	√	√	√	√	√	√	0093, 0245, 0254, 0278, 0292, 0428, 0678
KWID BR	UCH	√	√	√	√	√	√	0107, 0327, 0358, 0428
KWID BR	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0703, 0174, 0660, 0428, 0645
KWID BR	VARIABLE P.A.S.	√	√	√	√			0428
KWID BR	RADIO	√	√	√	√		√	0087, 0465, 0112, 0469, 0622
KWID BR	Multimedia Interface	√	√	√	√			0428
LAGUNA	Injection	√	√	√				
LAGUNA	Anti-lock Brake System(ABS)	√	√	√				
LAGUNA	Instrument Panel	√	√	√				
LAGUNA	UCH	√	√	√				
LAGUNA	Airbag / Pretensioners(SRS)	√	√	√				
LAGUNA	Air Conditioning(AC)	√	√	√				
LAGUNA	Voice Synthesiser	√	√	√				
LAGUNA	VARIABLE P.A.S.	√	√	√				
LAGUNA	Driver's Seat	√	√	√				
LAGUNA II	Instrument Panel	√	√	√	√		√	0261, 0260, 0241, 0262, 0680, 0163, 0254, 0672, 0231, 0253, 0135, 0256, 0255, 0258, 0257, 0678, 0655, 0259, 0092, 0093, 0250, 0251, 0163, 0160, 0646, 0428, 0243, 0287, 0242, 0146, 0245, 0244, 0148, 0247, 0665, 0246
LAGUNA II	Injection	√	√	√	√		√	0115, 0681, 0482, 0471, 0771, 0652, 0123, 0524, 0776
LAGUNA II	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0649, 0428, 0185, 0187
LAGUNA II	UCH	√	√	√	√		√	0080, 0240, 0210, 0212, 0234, 0211, 0695, 0238, 0193, 0195, 0073, 0095, 0130, 0196, 0062, 0107, 0228, 0428, 0067, 0221, 0441, 0661, 0201, 0104, 0269, 0224, 0268, 0205, 0227, 0127, 0204
LAGUNA II	Airbag / Pretensioners(SRS)	√	√	√	√			0668, 0428, 0372, 0372, 0660, 0668, 0645
LAGUNA II	Air Conditioning(AC)	√	√	√	√		√	0217, 0428, 0170, 0184, 0157, 0184, 0214, 0217, 0216
LAGUNA II	Automatic Gearbox(AT)	√	√	√	√		√	0461, 0483, 0461, 0702, 0713, 0429, 0409, 0408, 0476, 0674, 0467, 0412, 0414, 0413
LAGUNA II	Engine(petrol)	√	√	√	√		√	0428
LAGUNA II	Discharge Lamp	√	√	√	√		√	0005, 0428, 0030, 0030
LAGUNA II	Parking Assistance	√	√	√	√			0614, 0428, 0041, 0003, 0045, 0003, 0614

LAGUNA II	Heater	√	√	√	√		√	0427, 0439, 0461
LAGUNA II ph2	Injection	√	√	√	√		√	0428, 0681, 0482, 0471, 0771, 0471, 0770, 0652, 0428, 0532, 0776
LAGUNA II ph2	Instrument Panel	√	√	√	√		√	0261, 0260, 0241, 0262, 0680, 0163, 0254, 0672, 0231, 0253, 0135, 0256, 0255, 0258, 0257, 0678, 0655, 0259, 0092, 0093, 0250, 0251, 0163, 0160, 0646, 0428, 0243, 0287, 0242, 0146, 0245, 0244, 0148, 0247, 0665, 0246
LAGUNA II ph2	Lighting	√	√	√	√		√	0014, 0018, 0023, 0033, 0040, 0428, 0612
LAGUNA II ph2	Communications Unit	√	√	√	√		√	0449, 0437, 0428, 0014, 0628, 0428
LAGUNA II ph2	RADIO	√	√	√	√		√	0090, 0109, 0452, 0452, 0430, 0622
LAGUNA II ph2	Anti-lock Brake System(ABS)	√	√	√	√		√	0490, 0492, 0186, 0186, 0658, 0649, 0428, 0738, 0760, 0762, 0486, 0631, 0741, 0658
LAGUNA II ph2	UCH	√	√	√	√		√	0062, 0240, 0218, 0210, 0212, 0234, 0134, 0211, 0695, 0236, 0238, 0138, 0193, 0195, 0095, 0293, 0073, 0197, 0274, 0053, 0130, 0196, 0080, 0207, 0107, 0206, 0228, 0428, 0067, 0441, 0661, 0221, 0121, 0201, 0104, 0203, 0269, 0224, 0268, 0205, 0227, 0127, 0204
LAGUNA II ph2	Airbag / Pretensioners(SRS)	√	√	√	√			
LAGUNA II ph2	Air Conditioning(AC)	√	√	√	√		√	
LAGUNA II ph2	Automatic Gearbox(AT)	√	√	√	√		√	0461, 0467, 0702, 0713
LAGUNA II ph2	Gas Injection	√	√	√	√		√	0049, 0428
LAGUNA II ph2	Parking Assistance	√	√	√	√			0614, 0428, 0041, 0003, 0045, 0003, 0614
LAGUNA II ph2	Heater	√	√	√	√		√	0427, 0439, 0461
LAGUNA III	Injection	√	√	√	√	√	√	0450, 0438, 0537, 0536, 0558, 0539, 0836, 0838, 0837, 0839, 0771, 0551, 0495, 0696, 0531, 0553, 0530, 0428, 0513, 0535, 0237, 0776, 0534, 0450, 0471, 0822, 0428, 0505, 0529, 0826, 0540, 0561, 0542, 0464, 0541, 0544, 0565, 0821, 0567
LAGUNA III	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0649, 0490, 0428, 0492, 0486, 0428, 0658, 0787
LAGUNA III	Instrument Panel	√	√	√	√		√	0093, 0428, 0241, 0231, 0264, 0245, 0255, 0428, 0093, 0248
LAGUNA III	UCH	√	√	√	√	√	√	0428, 0210, 0661, 0376
LAGUNA III	Airbag / Pretensioners(SRS)	√	√	√	√			0372, 0428, 0645, 0660, 0730
LAGUNA III	Air Conditioning(AC)	√	√	√	√		√	0106, 0428, 0618, 0625
LAGUNA III	Automatic Gearbox(AT)	√	√	√	√	√	√	0461, 0493, 0493, 0504, 0757, 0429, 0748, 0758, 0454, 0752, 0429, 0502, 0755, 0666

LAGUNA III	Gas Injection	√	√	√	√	√	√	0428, 0685
LAGUNA III	VARIABLE P.A.S.	√	√	√	√	√		0428, 0644
LAGUNA III	Lighting	√	√	√	√		√	0428, 0612
LAGUNA III	4 Wheels Steering	√	√	√	√	√	√	0428, 0627, 0636
LAGUNA III	Parking PROX CAN	√	√	√	√		√	0428, 0071, 0082, 0045, 0077, 0003, 0047, 0057, 0614
LAGUNA III	Driver's Door	√	√	√	√		√	0428
LAGUNA III	Passenger's Door	√	√	√	√		√	0428
LAGUNA III	Driver's Seat	√	√	√	√			0428, 0610
LAGUNA III	Telematic CTRL Unit	√	√	√	√		√	
LAGUNA III	Left - Hand Door or Passenger Seat	√						0601
LAGUNA III	Right - Hand Door or Collapsible Seat	√						0015, 0601
LAGUNA III	Communications Unit	√	√	√	√		√	0017, 0129, 0437, 0428, 0606, 0161, 0461, 0159, 0090
LAGUNA III	RADIO	√	√	√	√		√	0087, 0087, 0109, 0629, 0035, 0430, 0452, 0055, 0465, 0035, 0112, 0436, 0469, 0622, 0105
LAGUNA III	Multimedia Interface	√	√	√	√		√	0428, 0021, 0029
LAGUNA III	Amplifier	√	√	√	√		√	0011, 0428, 0456, 0622
LAGUNA III	Multimedia Connection	√	√	√	√			0428, 0437, 0606
LAGUNA phase 2	Injection	√	√	√				
LAGUNA phase 2	Anti-lock Brake System(ABS)	√	√	√				
LAGUNA phase 2	Instrument Panel	√	√	√				
LAGUNA phase 2	UCH	√	√	√				
LAGUNA phase 2	Airbag / Pretensioners(SRS)	√	√	√				
LAGUNA phase 2	Air Conditioning(AC)	√	√	√				
LAGUNA phase 2	Automatic Gearbox(AT)	√	√	√				
LAGUNA phase 2	Voice Synthesiser	√	√	√				
LAGUNA phase 2	Engine(petrol)	√	√	√				
LAGUNA phase 2	VARIABLE P.A.S.	√	√	√				
LAGUNA phase 2	Driver's Seat	√	√	√				
LATITUDE - SM5	Injection	√	√	√	√	√	√	0450, 0471, 0790, 0482, 0537, 0526, 0536, 0525, 0539, 0428, 0527, 0824, 0529, 0771, 0485, 0495, 0531, 0553, 0544, 0428, 0532, 0821, 0776, 0479
LATITUDE - SM5	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0649, 0490, 0428, 0492, 0486, 0621, 0428, 0658
LATITUDE - SM5	UCH	√	√	√	√	√	√	0368, 0428, 0661, 0428
LATITUDE - SM5	Airbag / Pretensioners(SRS)	√	√	√	√			0372, 0428, 0645, 0660
LATITUDE - SM5	Air Conditioning(AC)	√	√	√	√		√	0625, 0106, 0428, 0428
LATITUDE - SM5	Automatic Gearbox(AT)	√	√	√	√	√	√	0461, 0493, 0461, 0504, 0757, 0748, 0758, 0519, 0674, 0454, 0511, 0752, 0502, 0656, 0755, 0666
LATITUDE - SM5	Gas Injection	√	√	√	√	√	√	0428, 0685
LATITUDE - SM5	Blind Spot Detection	√	√	√	√		√	0428

LATITUDE - SM5	VARIABLE P.A.S.	√	√	√	√	√		0428
LATITUDE - SM5	UPC	√	√	√	√		√	0428, 0648, 0141, 0144, 0141, 0651, 0648, 0457
LATITUDE - SM5	Lighting	√	√	√	√		√	0428, 0612
LATITUDE - SM5	Parking PROX CAN	√	√	√	√		√	0614, 0071, 0082, 0428, 0045, 0077, 0003, 0047, 0057, 0428, 0614
LATITUDE - SM5	Driver's Door	√	√	√	√		√	0428
LATITUDE - SM5	Passenger's Door	√	√	√	√		√	0428
LATITUDE - SM5	Driver's Seat	√	√	√	√			0428, 0610
LATITUDE - SM5	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
LATITUDE - SM5	Left - Hand Door or Passenger Seat	√			√			0601
LATITUDE - SM5	Right - Hand Door or Collapsible Seat	√			√			0601
LATITUDE - SM5	Communications Unit	√	√	√	√		√	0017, 0129, 0437, 0428, 0606, 0161, 0461, 0154, 0159, 0090
LATITUDE - SM5	RADIO	√	√	√	√		√	0182, 0087, 0087, 0182, 0452, 0055, 0176, 0465, 0035, 0112, 0469, 0436, 0105, 0622
LATITUDE - SM5	Multimedia Interface	√	√	√	√		√	0021, 0029, 0428
LATITUDE - SM5	Amplifier	√	√	√	√		√	0011, 0428, 0456, 0622
LATITUDE - SM5	Multimedia Connection	√	√	√	√			0428, 0437, 0606
LODGY	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0490, 0649, 0492, 0498, 0486, 0428, 0621, 0787
LODGY	Instrument Panel	√	√	√	√		√	0292, 0093, 0262, 0093, 0292, 0825, 0428, 0254, 0264, 0245, 0278, 0321, 0255, 0346, 0678, 0248
LODGY	UCH	√	√	√	√	√	√	0107, 0327, 0767, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0767, 0327, 0358, 0523
LODGY	Airbag / Pretensioners(SRS)	√	√	√	√		√	0660, 0428, 0645
LODGY	Automatic Gearbox(AT)	√	√	√	√	√	√	0713, 0517, 0769, 0518, 0461, 0461, 0674, 0761, 0467, 0511, 0702
LODGY	VARIABLE P.A.S.	√	√	√	√			0428, 0639
LODGY	RADIO	√	√	√	√		√	0182, 0087, 0452, 0176, 0465, 0112, 0182, 0469, 0622
LODGY	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803
LODGY	Hands - Fress Module	√	√	√	√	√	√	0128, 0428
LODGY	Multimedia Interface	√	√	√	√		√	0428
LOGAN	Injection	√	√	√	√	√	√	0482, 0482, 0450, 0537, 0428, 0529, 0771, 0551, 0531, 0553, 0544, 0577, 0543, 0576, 0535, 0524, 0237, 0578
LOGAN	Automatic Gearbox(AT)	√	√	√	√		√	0702, 0713, 0461, 0674, 0467
LOGAN	RADIO	√	√	√	√		√	0081, 0087, 0707, 0452, 0465, 0112, 0469, 0081, 0622
LOGAN	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0649, 0428, 0631
LOGAN	UCH	√	√	√	√		√	0428, 0267, 0352, 0267, 0428
LOGAN	Engine(petrol)	√	√	√	√		√	0428

LOGAN	VARIABLE P.A.S.	√	√	√	√		√	0428, 0639, 0194, 0428, 0050
LOGAN	Tracker	√	√	√	√			0012, 0415, 0428
LOGAN II - SANDERO II	Injection	√	√	√	√	√	√	0580, 0582, 0581, 0819, 0537, 0538, 0617, 0771, 0573, 0572, 0531, 0575, 0574, 0530, 0577, 0535, 0579, 0534, 0590, 0471, 0580, 0548, 0547, 0428, 0505, 0549, 0626, 0827, 0829, 0828, 0584, 0583, 0102, 0542, 0586, 0585, 0464, 0541, 0544, 0588, 0543, 0587, 0546, 0560, 0284, 0482, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0550, 0553, 0555, 0830, 0554, 0598, 0513, 0556, 0237, 0450, 0571, 0570, 0237, 0602, 0847, 0529, 0848, 0608, 0562, 0561, 0564, 0841, 0566, 0565, 0840,
LOGAN II - SANDERO II	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0490, 0649, 0492, 0507, 0486, 0428, 0621, 0786, 0787
LOGAN II - SANDERO II	Instrument Panel	√	√	√	√		√	0292, 0093, 0262, 0093, 0292, 0825, 0428, 0254, 0264, 0245, 0278, 0321, 0255, 0346, 0678, 0248
LOGAN II - SANDERO II	UCH	√	√	√	√	√	√	0327, 0767, 0107, 0407, 0428, 0516, 0509, 0385, 0520, 0773, 0522, 0411, 0107, 0327, 0358, 0523, 0138
LOGAN II - SANDERO II	Airbag / Pretensioners(SRS)	√	√	√	√		√	0660, 0428, 0645
LOGAN II - SANDERO II	Air Conditioning(AC)	√	√	√	√		√	0625, 0428, 0428, 0433, 0642, 0634, 0625, 0446
LOGAN II - SANDERO II	Automatic Gearbox(AT)	√	√	√	√	√	√	0702, 0517, 0769, 0518, 0461, 0461, 0674, 0761, 0511, 0467, 0713
LOGAN II - SANDERO II	VARIABLE P.A.S.	√	√	√	√			0428, 0639
LOGAN II - SANDERO II	UPC	√	√	√	√		√	0514, 0648, 0651, 0754
LOGAN II - SANDERO II	RADIO	√	√	√	√		√	0182, 0087, 0452, 0176, 0465, 0112, 0182, 0469, 0622
LOGAN II - SANDERO II	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
LOGAN II - SANDERO II	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803
LOGAN II - SANDERO II	Hands - Fress Module	√	√	√	√	√	√	0128, 0428
LOGAN II - SANDERO II	Tracker	√	√	√	√			0012, 0415, 0428
MAST RWD ph2	Injection	√	√	√				
MAST RWD ph2	Anti-lock Brake System(ABS)	√	√	√				
MAST RWD ph2	UCH	√	√	√				
MAST RWD ph2	Airbag / Pretensioners(SRS)	√	√	√				
MAST RWD ph2	Adaptation Unit	√	√	√				

MAST RWD ph3	Injection	√	√	√	√		√	0428, 0471, 0771, 0776
MAST RWD ph3	Anti-lock Brake System(ABS)	√	√	√	√		√	0428, 0649, 0658
MAST RWD ph3	Communications Unit	√	√	√	√		√	
MAST RWD ph3	UCH	√	√	√	√		√	0080, 0428, 0428, 0080
MAST RWD ph3	Airbag / Pretensioners(SRS)	√	√	√	√			0428, 0645, 0660, 0668
MAST RWD ph3	Adaptation Unit	√	√	√	√			0428
MASTER	Injection	√	√	√				
MASTER	Anti-lock Brake System(ABS)	√	√	√				
MASTER	UCH	√	√	√				
MASTER	Airbag / Pretensioners(SRS)	√	√	√				
MASTER	Piloted Suspension	√	√	√				
MASTER III	Injection	√	√	√	√	√	√	0580, 0482, 0559, 0438, 0558, 0836, 0838, 0617, 0837, 0839, 0551, 0771, 0552, 0530, 0533, 0535, 0513, 0534, 0590, 0450, 0570, 0580, 0602, 0428, 0505, 0626, 0608, 0540, 0562, 0561, 0542, 0541, 0464, 0563, 0544, 0565, 0568, 0567, 0580, 0438
MASTER III	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0490, 0492, 0085, 0490, 0658, 0649, 0428, 0507, 0078, 0078, 0486, 0621, 0786, 0787
MASTER III	Instrument Panel	√	√	√	√	√	√	0241, 0093, 0812, 0811, 0672, 0231, 0297, 0775, 0678, 0810, 0655, 0290, 0292, 0093, 0291, 0809, 0780, 0646, 0428, 0705, 0243, 0782, 0264, 0245, 0784, 0665, 0246, 0248
MASTER III	UCH	√	√	√	√		√	0428, 0508, 0354, 0354, 0428
MASTER III	Airbag / Pretensioners(SRS)	√	√	√	√			0341, 0372, 0428, 0645, 0660
MASTER III	Front Radar	√	√	√				0428
MASTER III	Air Conditioning(AC)	√	√	√	√		√	0625, 0618, 0428
MASTER III	Automatic Gearbox(AT)	√	√	√	√	√	√	0443, 0461, 0692, 0719, 0443, 0454, 0674, 0759, 0488, 0697, 0666
MASTER III	Blind Spot Detection	√	√	√	√		√	0428
MASTER III	VARIABLE P.A.S.	√	√	√	√			0083, 0428
MASTER III	Tyres	√	√	√	√	√		0440
MASTER III	Adaptation Unit	√	√	√	√			0440, 0428
MASTER III	Lighting	√	√	√	√		√	0428
MASTER III	Charge Controller	√	√	√	√	√		0428
MASTER III	Parking PROX CAN	√	√	√	√		√	0003, 0045, 0071, 0077, 0428, 0614
MASTER III	Dashboard Adaptation Box	√	√	√	√			0006, 0428
MASTER III	Hands - Fress Access	√	√	√	√			0462, 0469, 0727, 0734, 0736, 0742, 0746
MASTER III	Front Camera	√	√	√	√			0437, 0428
MASTER III	RADIO	√	√	√	√		√	0182, 0172, 0087, 0182, 0090, 0779, 0452, 0176, 0465, 0179, 0487, 0112, 0178, 0469, 0622
MASTER III	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699

MASTER III	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0461, 0669, 0801, 0613, 0803, 0607, 0474, 0650, 0484, 0432, 0641, 0795, 0662, 0794, 0632, 0797, 0466, 0675, 0447, 0623, 0799, 0424
MASTER III	BCB	√	√	√	√	√		
MASTER III	BMS	√	√	√	√	√		
MASTER III	EVC	√	√	√	√	√	√	0431, 0435, 0452, 0460, 0477, 0604, 0813
MASTER III	PEB	√	√	√	√	√		
MASTER III	BMS SAFETY	√						
MASTER III	Communications Unit	√	√	√	√		√	0017, 0129, 0437, 0606, 0161, 0461, 0159, 0090
MASTER III	Central GateWay	√	√	√	√	√		0004, 0428
MASTER III	Multimedia Interface	√	√	√	√		√	0428, 0021, 0038, 0428, 0029
MASTER III	Multimedia Connection	√	√	√	√			0428, 0437, 0606
MASTER III	Tracker	√	√	√	√			0012, 0415, 0428
MASTER III	Parking Assistance	√	√	√	√		√	0614, 0428, 0003, 0045, 0003, 0614
MASTER ph 2	Injection	√	√	√				
MASTER ph 2	Anti-lock Brake System(ABS)	√	√	√				
MASTER ph 2	UCH	√	√	√				
MASTER ph 2	Airbag / Pretensioners(SRS)	√	√	√				
MASTER ph 2	Automatic Gearbox(AT)	√	√	√				
MASTER ph 2	Adaptation Unit	√	√	√				
MASTER ph 2	Parking PROX CAN	√	√	√				
MASTER ph 2	Piloted Suspension	√	√	√				
MASTER ph 2	Parking Assistance	√	√	√				
MASTER ph 3	Communications Unit	√	√	√	√		√	
MASTER ph 3	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0724, 0649, 0428, 0621
MASTER ph 3	UCH	√	√	√	√		√	0080, 0428, 0428, 0080
MASTER ph 3	Airbag / Pretensioners(SRS)	√	√	√	√			0428, 0645, 0660, 0668
MASTER ph 3	Automatic Gearbox(AT)	√	√	√	√		√	0692, 0719, 0443, 0454, 0674, 0500, 0429, 0488, 0697, 0666
MASTER ph 3	Tracker	√	√	√	√			0012, 0415, 0428
MASTER ph 3	Adaptation Unit	√	√	√	√			0428
MASTER ph 3	Piloted Suspension	√	√	√	√		√	0428
MASTER ph 3	Parking Assistance	√	√	√	√			0003, 0041, 0045, 0428
MASTER RWD	Injection	√	√	√				
MASTER RWD	UCH	√	√	√				
MASTER RWD	Airbag / Pretensioners(SRS)	√	√	√				
MEGANE - SCEN.	Injection	√	√	√				
MEGANE - SCEN.	Anti-lock Brake System(ABS)	√	√	√				
MEGANE - SCEN.	Airbag / Pretensioners(SRS)	√	√	√				
MEGANE - SCEN.	Air Conditioning(AC)	√	√	√				
MEGANE - SCEN.	Automatic Gearbox(AT)	√	√	√				
MEGANE - SCEN.	Engine(petrol)	√	√	√				
MEGANE - SCEN.	Tyres	√	√	√				

MEGANE - SCEN.	Sunroof Control Unit	√	√	√				
MEGANE - SCEN.	Driver's Seat	√	√	√				
MEGANE II	Injection	√	√	√	√	√	√	0681, 0438, 0834, 0537, 0833, 0536, 0539, 0538, 0617, 0771, 0770, 0652, 0531, 0530, 0428, 0532, 0535, 0832, 0534, 0776, 0831, 0690, 0450, 0471, 0482, 0602, 0528, 0428, 0626, 0505, 0529, 0608, 0540, 0542, 0464, 0541, 0544, 0667, 0524
MEGANE II	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0745, 0649, 0428, 0738, 0451, 0428, 0631, 0741, 0766, 0658
MEGANE II	Instrument Panel	√	√	√	√		√	0262, 0020, 0254, 0672, 0253, 0135, 0255, 0136, 0139, 0678, 0655, 0092, 0291, 0250, 0131, 0020, 0646, 0428, 0243, 0242, 0143, 0245, 0046, 0247, 0148, 0665, 0246, 0248
MEGANE II	UCH	√	√	√	√		√	0095, 0053, 0053, 0095, 0107, 0118, 0209, 0428, 0089, 0067, 0320, 0099, 0266, 0127, 0116, 0710
MEGANE II	Air Conditioning(AC)	√	√	√	√			0157, 0225, 0428
MEGANE II	Automatic Gearbox(AT)	√	√	√	√		√	0713, 0702, 0461, 0461, 0674, 0476, 0467, 0702
MEGANE II	VARIABLE P.A.S.	√	√	√	√			0428, 0639, 0199, 0198, 0630, 0428
MEGANE II	UPC	√	√	√	√		√	0428, 0001, 0428
MEGANE II	Sunroof Control Unit	√	√	√	√		√	0010, 0428
MEGANE II	Lighting	√	√	√	√		√	0014, 0018, 0023, 0040, 0428, 0612
MEGANE II	Communications Unit	√	√	√	√		√	
MEGANE II	Engine(petrol)	√	√	√	√		√	0428
MEGANE II	Tracker	√	√	√	√			0012, 0415, 0428
MEGANE II	Discharge Lamp	√	√	√	√			0032, 0428
MEGANE II	Left COSLAD	√	√	√	√		√	0005, 0030, 0032, 0428
MEGANE II	Right COSLAD	√	√	√	√		√	0005, 0030, 0032, 0428
MEGANE II	Parking Assistance	√	√	√	√			0003, 0041, 0045, 0428
MEGANE III - SCENIC III	Injection	√	√	√	√	√	√	0580, 0450, 0537, 0536, 0539, 0538, 0617, 0771, 0495, 0531, 0575, 0530, 0533, 0535, 0579, 0776, 0534, 0593, 0471, 0592, 0580, 0548, 0547, 0428, 0505, 0549, 0626, 0826, 0540, 0542, 0464, 0541, 0783, 0544, 0546, 0589, 0482, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0550, 0594, 0553, 0597, 0552, 0596, 0555, 0599, 0513, 0557, 0556, 0237, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0563, 0288, 0566, 0565, 0840, 0568, 0843,
MEGANE III - SCENIC III	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0649, 0490, 0428, 0492, 0498, 0486, 0428, 0658, 0787

MEGANE III - SCENIC III	Instrument Panel	√	√	√	√		√	0093, 0428, 0241, 0254, 0231, 0264, 0245, 0255, 0093, 0764, 0301, 0248
MEGANE III - SCENIC III	UCH	√	√	√	√	√	√	0316, 0371, 0428, 0729
MEGANE III - SCENIC III	Airbag / Pretensioners(SRS)	√	√	√	√			0372, 0428, 0645, 0660
MEGANE III - SCENIC III	Air Conditioning(AC)	√	√	√	√		√	0625, 0428
MEGANE III - SCENIC III	Gas Injection	√	√	√	√	√	√	0428, 0685, 0714, 0720
MEGANE III - SCENIC III	VARIABLE P.A.S.	√	√	√	√	√	√	0428, 0630
MEGANE III - SCENIC III	UPC	√	√	√	√		√	0494, 0141, 0715, 0648, 0428, 0706, 0671, 0682, 0693, 0428, 0698, 0499, 0664, 0686, 0689, 0457, 0501, 0677
MEGANE III - SCENIC III	Sunroof Control Unit	√	√	√	√		√	0615, 0428, 0434, 0428, 0624
MEGANE III - SCENIC III	Lighting	√	√	√	√		√	0428, 0612
MEGANE III - SCENIC III	Parking PROX CAN	√	√	√	√		√	0614, 0071, 0082, 0428, 0045, 0077, 0003, 0047, 0057, 0428, 0614
MEGANE III - SCENIC III	Driver's Door	√	√	√	√		√	0428, 0625
MEGANE III - SCENIC III	Passenger's Door	√	√	√	√			0428
MEGANE III - SCENIC III	Driver's Seat	√	√	√	√			0428, 0610
MEGANE III - SCENIC III	Front Camera	√	√	√	√			0437, 0428
MEGANE III - SCENIC III	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
MEGANE III - SCENIC III	Communications Unit	√	√	√	√		√	0017, 0090, 0129, 0437, 0606, 0161, 0461, 0159
MEGANE III - SCENIC III	RADIO	√	√	√	√		√	0087, 0087, 0109, 0629, 0035, 0452, 0430, 0055, 0465, 0035, 0112, 0049, 0436, 0622, 0105
MEGANE III - SCENIC III	Multimedia Interface	√	√	√	√		√	0428, 0021, 0038, 0428, 0029
MEGANE III - SCENIC III	Multimedia Connection	√	√	√	√			0428, 0437, 0606

MEGANE IV	Injection	√	√	√	√	√	√	0580, 0582, 0581, 0288, 0617, 0771, 0573, 0572, 0531, 0575, 0850, 0574, 0535, 0579, 0591, 0590, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0829, 0542, 0541, 0783, 0544, 0589, 0482, 0559, 0438, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0550, 0597, 0596, 0555, 0599, 0830, 0554, 0598, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0849, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0840,
MEGANE IV	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787
MEGANE IV	Instrument Panel	√	√	√	√		√	0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248
MEGANE IV	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0372, 0660, 0645
MEGANE IV	Front Radar	√	√	√	√	√		0428
MEGANE IV	Air Conditioning(AC)	√	√	√	√		√	0428, 0433, 0634
MEGANE IV	Automatic Gearbox(AT)	√	√	√	√	√	√	0461, 0519, 0750, 0763
MEGANE IV	Gas Injection	√	√	√	√	√		0428, 0714, 0720, 0731
MEGANE IV	Supervisor or DCDC	√	√	√	√	√	√	0497
MEGANE IV	VARIABLE P.A.S.	√	√	√	√	√		0428
MEGANE IV	UPC	√	√	√	√		√	0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754
MEGANE IV	Adaptation Unit	√	√	√	√			0200, 0202, 0440
MEGANE IV	4 Wheels Steering	√	√	√	√	√	√	0636, 0627, 0428
MEGANE IV	Parking PROX CAN	√	√	√	√		√	
MEGANE IV	Driver's Seat	√	√	√	√		√	0428, 0663, 0673, 0676
MEGANE IV	Front Camera	√	√	√	√			0005, 0068, 0428
MEGANE IV	RADIO	√	√	√	√		√	0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469
MEGANE IV	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
MEGANE IV	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803
MEGANE IV	Left - Hand Door or Passenger Seat	√	√	√	√		√	0428, 0633, 0647, 0653
MEGANE IV	BMS	√	√	√	√	√	√	0428, 0620, 0701
MEGANE IV	PEB	√	√	√	√	√		0428
MEGANE IV	BMS SAFETY	√	√	√				0428, 0619
MEGANE IV	Head up Display	√	√	√			√	0428
MEGANE IV	Multimedia Interface	√	√	√	√		√	0437
MEGANE IV	Amplifier	√	√	√	√		√	0060, 0428, 0456

MEGANE IV SEDAN	Injection	√	√	√	√	√	√	0580, 0617, 0771, 0531, 0535, 0579, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0542, 0541, 0783, 0544, 0589, 0482, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0428, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0840, 0568, 0842, 0567, 0843, 0600
MEGANE IV SEDAN	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787
MEGANE IV SEDAN	UCH	√	√	√	√	√	√	0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358
MEGANE IV SEDAN	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0372, 0660, 0645
MEGANE IV SEDAN	Front Radar	√	√	√	√	√		0428
MEGANE IV SEDAN	Air Conditioning(AC)	√	√	√	√		√	0428, 0433, 0634
MEGANE IV SEDAN	Automatic Gearbox(AT)	√	√	√	√	√	√	
MEGANE IV SEDAN	Gas Injection	√	√	√	√	√		0428, 0714, 0720, 0731
MEGANE IV SEDAN	VARIABLE P.A.S.	√	√	√	√	√		0428
MEGANE IV SEDAN	UPC	√	√	√	√		√	0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754
MEGANE IV SEDAN	Parking PROX CAN	√	√	√	√		√	
MEGANE IV SEDAN	Driver's Seat	√	√	√	√		√	0428, 0663, 0673, 0676
MEGANE IV SEDAN	Front Camera	√	√	√	√			0005, 0068, 0428
MEGANE IV SEDAN	RADIO	√	√	√	√		√	0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469
MEGANE IV SEDAN	Telematic CTRL Unit	√	√	√	√		√	
MEGANE IV SEDAN	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803
MEGANE IV SEDAN	Left - Hand Door or Passenger Seat	√	√	√	√		√	0428, 0633, 0647, 0653
MEGANE IV SEDAN	Head up Display	√	√	√			√	
MEGANE IV SEDAN	Multimedia Interface	√	√	√	√		√	0437
MEGANE IV SEDAN	Amplifier	√	√	√	√		√	0060, 0428, 0456
MODUS	Injection	√	√	√	√	√	√	0438, 0602, 0428, 0626, 0690, 0617, 0471, 0608, 0464, 0428, 0667, 0438
MODUS	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0745, 0649, 0428, 0738, 0451, 0428, 0631, 0741, 0766, 0658
MODUS	Instrument Panel	√	√	√	√		√	0291, 0093, 0254, 0672, 0231, 0253, 0255, 0772, 0678, 0655, 0093, 0291, 0250, 0294, 0768, 0646, 0726, 0428, 0243, 0242, 0245, 0148, 0247, 0665, 0246, 0721
MODUS	UCH	√	√	√	√		√	0218, 0107, 0209, 0428, 0095, 0053, 0114, 0213, 0138, 0215, 0710

MODUS	Airbag / Pretensioners(SRS)	√	√	√	√			0064, 0361, 0317, 0319, 0341, 0353, 0330, 0310, 0332, 0313, 0357, 0334, 0356, 0315, 0314, 0070, 0074, 0296, 0295, 0372, 0668, 0329, 0428, 0056, 0341, 0660, 0645, 0369
MODUS	Automatic Gearbox(AT)	√	√	√	√		√	0461, 0692, 0461, 0702, 0713, 0429, 0719, 0674, 0443, 0454, 0467, 0488, 0697, 0666
MODUS	VARIABLE P.A.S.	√	√	√	√			0428, 0639, 0630, 0428
MODUS	UPC	√	√	√	√		√	0428
MODUS	Tyres	√	√	√	√			0042, 0440, 0740
MODUS	Lighting	√	√	√	√		√	0428, 0014, 0040, 0043, 0023, 0033, 0018, 0612
MODUS	Hands - Fress KIT	√	√	√	√		√	0058, 0428, 0606, 0643
MODUS	Parking Assistance	√	√	√	√			0614, 0428, 0041, 0003, 0045, 0003, 0614
NEW SM3 - FLUENCE - MEGANE	Injection	√	√	√	√	√	√	0450, 0537, 0536, 0558, 0539, 0836, 0838, 0837, 0839, 0771, 0551, 0550, 0531, 0553, 0575, 0530, 0555, 0428, 0535, 0513, 0557, 0556, 0534, 0237, 0450, 0471, 0570, 0428, 0505, 0529, 0826, 0562, 0540, 0561, 0542, 0541, 0563, 0464, 0544, 0565, 0543, 0567
NEW SM3 - FLUENCE - MEGANE	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0658, 0649, 0490, 0428, 0492, 0498, 0486, 0428, 0658, 0787
NEW SM3 - FLUENCE - MEGANE	Instrument Panel	√	√	√	√		√	0290, 0093, 0241, 0093, 0290, 0428, 0254, 0276, 0231, 0264, 0245, 0344, 0255, 0343, 0764, 0247, 0248
NEW SM3 - FLUENCE - MEGANE	UCH	√	√	√	√	√	√	0207, 0316, 0371, 0428
NEW SM3 - FLUENCE - MEGANE	Airbag / Pretensioners(SRS)	√	√	√	√			0372, 0428, 0645, 0660
NEW SM3 - FLUENCE - MEGANE	Air Conditioning(AC)	√	√	√	√		√	0428, 0625
NEW SM3 - FLUENCE - MEGANE	Automatic Gearbox(AT)	√	√	√	√	√	√	0713, 0461, 0493, 0461, 0674, 0761, 0467, 0702
NEW SM3 - FLUENCE - MEGANE	Gas Injection	√	√	√	√	√	√	0428, 0685, 0714, 0720
NEW SM3 - FLUENCE - MEGANE	Blind Spot Detection	√	√	√	√		√	0428
NEW SM3 - FLUENCE - MEGANE	VARIABLE P.A.S.	√	√	√	√	√	√	0630, 0428
NEW SM3 - FLUENCE - MEGANE	UPC	√	√	√	√		√	0648, 0153, 0141, 0155, 0141, 0648, 0457
NEW SM3 - FLUENCE - MEGANE	Sunroof Control Unit	√	√	√	√		√	0428, 0615, 0624
NEW SM3 - FLUENCE - MEGANE	Lighting	√	√	√	√		√	0428, 0612

NEW SM3 - FLUENCE - MEGANE	Parking PROX CAN	√	√	√	√		√	0614, 0071, 0082, 0428, 0045, 0077, 0003, 0047, 0057, 0428, 0614
NEW SM3 - FLUENCE - MEGANE	Driver's Door	√	√	√	√		√	0428, 0625
NEW SM3 - FLUENCE - MEGANE	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0691, 0452, 0426, 0458, 0699
NEW SM3 - FLUENCE - MEGANE	BCB	√	√	√	√	√	√	0019, 0428, 0002, 0002, 0024, 0019
NEW SM3 - FLUENCE - MEGANE	EVC	√	√	√	√	√	√	0026, 0604, 0637, 0813, 0481, 0431, 0460, 0452, 0473, 0431, 0477, 0435
NEW SM3 - FLUENCE - MEGANE	PEB	√	√	√	√	√		0428, 0442, 0428
NEW SM3 - FLUENCE - MEGANE	BMS SAFETY	√	√	√	√	√		0428, 0619, 0428
NEW SM3 - FLUENCE - MEGANE	Communications Unit	√	√	√	√		√	0017, 0129, 0437, 0606, 0161, 0461, 0461, 0159, 0090
NEW SM3 - FLUENCE - MEGANE	RADIO	√	√	√	√		√	0182, 0087, 0452, 0176, 0087, 0112, 0182, 0469, 0622
NEW SM3 - FLUENCE - MEGANE	Multimedia Interface	√	√	√	√		√	0428, 0021, 0038, 0428, 0029
NEW SM3 - FLUENCE - MEGANE	Amplifier	√	√	√	√		√	0011, 0428, 0456, 0622
NEW SM3 - FLUENCE - MEGANE	Multimedia Connection	√	√	√	√			0428, 0437, 0606
NEW SM3 - FLUENCE - MEGANE	Tracker	√	√	√	√			0012, 0415, 0428
SANDERO	Injection	√	√	√	√	√	√	0428, 0529, 0450, 0771, 0482, 0531, 0553, 0428, 0535, 0524
SANDERO	Automatic Gearbox(AT)	√	√	√	√		√	0461, 0467, 0674, 0702, 0713
SANDERO	RADIO	√	√	√	√		√	0081, 0087, 0707, 0452, 0465, 0112, 0469, 0081, 0622
SANDERO	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0649, 0428, 0631
SANDERO	UCH	√	√	√	√		√	0428, 0267, 0352, 0267, 0428
SANDERO	Airbag / Pretensioners(SRS)	√	√	√	√			0096, 0372, 0096, 0317, 0319, 0428, 0100, 0166, 0353, 0341, 0660, 0168, 0300, 0366, 0299, 0137, 0302, 0428, 0367, 0348, 0645, 0347
SANDERO	Engine(petrol)	√	√	√	√		√	0428
SANDERO	VARIABLE P.A.S.	√	√	√	√		√	0428, 0639, 0194, 0428, 0050
SANDERO	Tracker	√	√	√	√			0012, 0415, 0428
SCENIC II	Injection	√	√	√	√	√	√	0681, 0482, 0438, 0834, 0537, 0833, 0536, 0539, 0538, 0617, 0771, 0770, 0652, 0531, 0530, 0428, 0532, 0535, 0832, 0534, 0776, 0831, 0690, 0450, 0471, 0482, 0602, 0528, 0428, 0626, 0505, 0529, 0608, 0540, 0542, 0464, 0541, 0541, 0667, 0524
SCENIC II	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0745, 0649, 0428, 0738, 0451, 0428, 0631, 0741, 0766, 0658

SCENIC II	Instrument Panel	√	√	√	√		√	0291, 0250, 0251, 0020, 0020, 0291, 0646, 0428, 0243, 0254, 0672, 0242, 0245, 0255, 0247, 0148, 0665, 0246, 0678, 0248, 0655
SCENIC II	Airbag / Pretensioners(SRS)	√	√	√	√			
SCENIC II	Air Conditioning(AC)	√	√	√	√			0157, 0225, 0428
SCENIC II	Automatic Gearbox(AT)	√	√	√	√		√	0713, 0429, 0461, 0493, 0674, 0476, 0467, 0429, 0702
SCENIC II	Gas Injection	√	√	√	√		√	0049, 0428
SCENIC II	VARIABLE P.A.S.	√	√	√	√			0428, 0639, 0199, 0198, 0630, 0428
SCENIC II	UPC	√	√	√	√		√	0428, 0001, 0428
SCENIC II	Parking PROX CAN	√	√	√	√			0003, 0041, 0045, 0047, 0057, 0428, 0614, 0649
SCENIC II	Communications Unit	√	√	√	√		√	0014, 0428, 0437, 0449, 0628
SCENIC II	RADIO	√	√	√	√		√	0090, 0109, 0452, 0452, 0430, 0622
SCENIC II	Multimedia Interface	√	√	√	√		√	0437, 0428, 0049, 0014
SCENIC II	Engine(petrol)	√	√	√	√		√	0428
SCENIC II	Discharge Lamp	√	√	√	√		√	0005, 0428, 0030, 0030
SCENIC II	Parking Assistance	√	√	√	√			0003, 0041, 0045, 0428
SCENIC IV	Injection	√	√	√	√	√	√	0580, 0617, 0771, 0531, 0575, 0850, 0535, 0579, 0591, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0542, 0541, 0783, 0544, 0589, 0482, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0849, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0840, 0568, 0843, 0564, 0567, 0616, 0666, 0466
SCENIC IV	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787
SCENIC IV	Instrument Panel	√	√	√	√		√	0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248
SCENIC IV	UCH	√	√	√	√	√	√	0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358
SCENIC IV	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0372, 0660, 0645
SCENIC IV	Air Conditioning(AC)	√	√	√	√		√	0428, 0433, 0634
SCENIC IV	Automatic Gearbox(AT)	√	√	√	√	√	√	
SCENIC IV	Gas Injection	√	√	√	√	√		0428, 0714, 0720, 0731
SCENIC IV	Supervisor or DCDC	√	√	√	√	√	√	0497
SCENIC IV	UPC	√	√	√	√		√	0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754
SCENIC IV	Parking PROX CAN	√	√	√	√		√	
SCENIC IV	Driver's Seat	√	√	√	√		√	0428, 0663, 0673, 0676

SCENIC IV	Front Camera	√	√	√	√	√		
SCENIC IV	RADIO	√	√	√	√		√	0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469
SCENIC IV	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
SCENIC IV	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803
SCENIC IV	Left - Hand Door or Passenger Seat	√	√	√	√		√	0428, 0633, 0647, 0653
SCENIC IV	Right - Hand Door or Collapsible Seat	√	√	√	√		√	0428
SCENIC IV	BMS	√	√	√	√	√	√	0428, 0620, 0701
SCENIC IV	PEB	√	√	√	√	√		0428
SCENIC IV	BMS SAFETY	√	√	√				0428, 0619
SCENIC IV	Head up Display	√	√	√			√	0428
SCENIC IV	Multimedia Interface	√	√	√	√		√	0437
SCENIC IV	Amplifier	√	√	√	√		√	0060, 0428, 0456
SM7 - L47	Injection	√	√	√	√	√	√	
SM7 - L47	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0428, 0486, 0490, 0492, 0621, 0649, 0658
SM7 - L47	Instrument Panel	√	√	√	√		√	
SM7 - L47	UCH	√	√	√	√	√	√	
SM7 - L47	Airbag / Pretensioners(SRS)	√	√	√	√			0372, 0428, 0645, 0660
SM7 - L47	Air Conditioning(AC)	√	√	√	√		√	
SM7 - L47	Automatic Gearbox(AT)	√	√	√	√	√	√	0461, 0493, 0493, 0461, 0504, 0757, 0748, 0758, 0519, 0454, 0511, 0752, 0502, 0656, 0755, 0666
SM7 - L47	Gas Injection	√	√	√	√	√	√	0428, 0685
SM7 - L47	Blind Spot Detection	√	√	√	√		√	0428
SM7 - L47	VARIABLE P.A.S.	√	√	√	√	√		0428
SM7 - L47	UPC	√	√	√	√		√	0457, 0648, 0428, 0141, 0144, 0651, 0457
SM7 - L47	Lighting	√	√	√	√		√	0428, 0612
SM7 - L47	Parking PROX CAN	√	√	√	√		√	0428, 0071, 0082, 0045, 0077, 0003, 0047, 0057, 0614
SM7 - L47	Driver's Door	√	√	√	√		√	0428
SM7 - L47	Passenger's Door	√	√	√	√		√	0428
SM7 - L47	Driver's Seat	√	√	√	√			0428, 0610
SM7 - L47	Left - Hand Door or Passenger Seat	√			√			0601
SM7 - L47	Communications Unit	√	√	√	√		√	0017, 0090, 0129, 0437, 0606, 0161, 0461, 0159
SM7 - L47	RADIO	√	√	√	√		√	0182, 0087, 0182, 0452, 0055, 0176, 0465, 0035, 0112, 0469, 0436, 0105, 0622
SM7 - L47	Multimedia Interface	√	√	√	√		√	0021, 0029, 0428
SM7 - L47	Amplifier	√	√	√	√		√	0011, 0428, 0456, 0622
SM7 - L47	Multimedia Connection	√	√	√	√			0428, 0437, 0606

TALISMAN - SM6	Injection	√	√	√	√	√	√	0580, 0582, 0581, 0617, 0771, 0573, 0572, 0531, 0574, 0535, 0579, 0593, 0471, 0592, 0580, 0505, 0626, 0428, 0542, 0541, 0783, 0544, 0589, 0482, 0559, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0550, 0597, 0596, 0555, 0599, 0428, 0554, 0598, 0513, 0557, 0556, 0450, 0570, 0845, 0602, 0846, 0529, 0608, 0562, 0561, 0288, 0563, 0566, 0565, 0840, 0568, 0843, 0557, 0513, 0588
TALISMAN - SM6	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787
TALISMAN - SM6	Instrument Panel	√	√	√	√		√	0292, 0093, 0428, 0241, 0020, 0020, 0264, 0245, 0292, 0248
TALISMAN - SM6	UCH	√	√	√	√	√	√	0381, 0084, 0351, 0383, 0084, 0405, 0028, 0107, 0327, 0404, 0406, 0428, 0374, 0385, 0410, 0398, 0324, 0379, 0403, 0028, 0358
TALISMAN - SM6	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0372, 0660, 0645
TALISMAN - SM6	Front Radar	√	√	√	√	√		0428
TALISMAN - SM6	Air Conditioning(AC)	√	√	√	√		√	0428, 0433, 0634
TALISMAN - SM6	Automatic Gearbox(AT)	√	√	√	√	√	√	
TALISMAN - SM6	Gas Injection	√	√	√	√	√		0428, 0714, 0720, 0731
TALISMAN - SM6	VARIABLE P.A.S.	√	√	√	√	√		0428
TALISMAN - SM6	UPC	√	√	√	√		√	0144, 0164, 0457, 0494, 0506, 0512, 0651, 0754
TALISMAN - SM6	Power Back Door	√	√	√	√			0009, 0428
TALISMAN - SM6	4 Wheels Steering	√	√	√	√	√	√	0636, 0627, 0428
TALISMAN - SM6	Parking PROX CAN	√	√	√	√		√	
TALISMAN - SM6	Piloted Suspension	√	√	√	√	√		0440
TALISMAN - SM6	Driver's Seat	√	√	√	√		√	0428, 0663, 0673, 0676
TALISMAN - SM6	RADIO	√	√	√	√		√	0779, 0172, 0087, 0179, 0465, 0487, 0112, 0178, 0090, 0469
TALISMAN - SM6	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
TALISMAN - SM6	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0484, 0794, 0795, 0797, 0799, 0801, 0803
TALISMAN - SM6	Left - Hand Door or Passenger Seat	√	√	√	√		√	0428, 0633, 0647, 0653
TALISMAN - SM6	Head up Display	√	√	√			√	0428
TALISMAN - SM6	Multimedia Interface	√	√	√	√		√	0437
TALISMAN - SM6	Amplifier	√	√	√	√		√	0060, 0428, 0456
THALIA - SYMB.2	Injection	√	√	√	√	√	√	0450, 0482, 0119, 0438, 0602, 0428, 0626, 0529, 0617, 0111, 0608, 0771, 0232, 0495, 0531, 0553, 0428, 0115, 0489, 0687, 0535, 0524, 0743
THALIA - SYMB.2	Anti-lock Brake System(ABS)	√	√	√	√		√	0428, 0631, 0649, 0658

THALIA - SYMB.2	UCH	√	√	√	√		√	0428, 0267, 0352, 0267, 0428
THALIA - SYMB.2	Airbag / Pretensioners(SRS)	√	√	√	√			0372, 0317, 0319, 0428, 0166, 0353, 0660, 0165, 0341, 0168, 0300, 0366, 0299, 0137, 0302, 0428, 0367, 0645, 0348, 0347
THALIA - SYMB.2	Air Conditioning(AC)	√	√	√	√		√	0428
THALIA - SYMB.2	Automatic Gearbox(AT)	√	√	√	√		√	0713, 0702, 0461, 0461, 0674, 0467, 0702
THALIA - SYMB.2	VARIABLE P.A.S.	√	√	√	√			0428, 0639
THALIA - SYMB.2	Tracker	√	√	√	√			0012, 0415, 0428
THALIA - SYMBL	Injection	√	√	√	√		√	0428, 0471, 0667, 0690
THALIA - SYMBL	Anti-lock Brake System(ABS)	√	√	√				
THALIA - SYMBL	UCH	√	√	√				
THALIA - SYMBL	Airbag / Pretensioners(SRS)	√	√	√				
THALIA - SYMBL	Air Conditioning(AC)	√	√	√				
THALIA - SYMBL	Automatic Gearbox(AT)	√	√	√				
TRAFIC II	Injection	√	√	√				
TRAFIC II	Anti-lock Brake System(ABS)	√	√	√				
TRAFIC II	UCH	√	√	√				
TRAFIC II	Airbag / Pretensioners(SRS)	√	√	√				
TRAFIC II	Automatic Gearbox(AT)	√	√	√				
TRAFIC II	Adaptation Unit	√	√	√				
TRAFIC II	Parking PROX CAN	√	√	√				
TRAFIC II	Parking Assistance	√	√	√				
TRAFIC II	Heater	√	√	√				
TRAFIC II p2 - 3	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0724, 0745, 0649, 0428, 0451, 0621, 0428, 0631, 0766, 0777, 0658
TRAFIC II p2 - 3	Instrument Panel	√	√	√	√		√	0139, 0148, 0180, 0231, 0243, 0245, 0247, 0254, 0255, 0262, 0264, 0291, 0294, 0298, 0305, 0306, 0307, 0428, 0680
TRAFIC II p2 - 3	Air Conditioning(AC)	√	√	√	√		√	0157, 0230, 0428
TRAFIC II p2 - 3	Automatic Gearbox(AT)	√	√	√	√		√	0461, 0692, 0692, 0429, 0443, 0719, 0454, 0674, 0443, 0500, 0488, 0697, 0666
TRAFIC II p2 - 3	Communications Unit	√	√	√	√		√	0437, 0129, 0606, 0461, 0110, 0110, 0132, 0154, 0156, 0129
TRAFIC II p2 - 3	RADIO	√	√	√	√		√	
TRAFIC II p2 - 3	Multimedia Interface	√	√	√	√		√	0049, 0051, 0059, 0072, 0428
TRAFIC II p2 - 3	Multimedia Connection	√	√	√	√			0013, 0428, 0606
TRAFIC II p2 - 3	UCH	√	√	√	√		√	0080, 0428, 0362, 0053, 0212, 0428, 0269, 0080, 0359, 0138, 0765
TRAFIC II p2 - 3	Airbag / Pretensioners(SRS)	√	√	√	√			0668, 0428, 0372, 0660, 0645
TRAFIC II p2 - 3	Adaptation Unit	√	√	√	√			0428
TRAFIC II p2 - 3	Parking Assistance	√	√	√	√			0428, 0041, 0003, 0045, 0003, 0428
TRAFIC II p2 - 3	Heater	√	√	√	√		√	0427, 0439, 0461

TRAFIC III	Injection	√	√	√	√	√	√	0580, 0288, 0617, 0771, 0535, 0579, 0593, 0471, 0592, 0580, 0505, 0626, 0542, 0541, 0544, 0545, 0589, 0482, 0559, 0558, 0836, 0838, 0837, 0839, 0551, 0595, 0594, 0597, 0596, 0555, 0599, 0513, 0557, 0556, 0450, 0570, 0602, 0608, 0562, 0561, 0563, 0566, 0565, 0840, 0568, 0843, 0567, 0842, 0600
TRAFIC III	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0078, 0428, 0480, 0486, 0490, 0492, 0498, 0507, 0621, 0658, 0718, 0753, 0777, 0785, 0787
TRAFIC III	Instrument Panel	√	√	√	√		√	0292, 0428, 0093, 0231, 0245, 0093, 0292, 0345, 0248
TRAFIC III	UCH	√	√	√	√	√	√	0107, 0428, 0370, 0053, 0385, 0358
TRAFIC III	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0703, 0174, 0660, 0428, 0645
TRAFIC III	Automatic Gearbox(AT)	√	√	√	√	√	√	
TRAFIC III	VARIABLE P.A.S.	√	√	√	√			0083, 0428
TRAFIC III	UPC	√	√	√	√		√	0457, 0149, 0648, 0162, 0494, 0651, 0149, 0457
TRAFIC III	Adaptation Unit	√	√	√	√			0440, 0428
TRAFIC III	Parking PROX CAN	√	√	√	√		√	0614, 0428, 0071, 0082, 0003, 0045, 0077
TRAFIC III	RADIO	√	√	√	√		√	0182, 0172, 0087, 0182, 0090, 0779, 0452, 0176, 0465, 0179, 0487, 0112, 0178, 0469, 0622
TRAFIC III	Telematic CTRL Unit	√	√	√	√		√	0426, 0717, 0452, 0426, 0458, 0699
TRAFIC III	Urea Dosing Control Module	√	√	√	√	√	√	0461, 0461, 0669, 0801, 0613, 0803, 0607, 0474, 0650, 0484, 0432, 0641, 0795, 0662, 0794, 0632, 0797, 0466, 0675, 0447, 0623, 0799, 0424
TRAFIC III	Hands - Fress Module	√	√	√	√	√	√	0128, 0428
TRAFIC III	Communications Unit	√	√	√	√		√	0017, 0129, 0159, 0161, 0437, 0461
TRAFIC III	Multimedia Interface	√	√	√	√		√	0428
TRAFIC III	Heater	√	√	√	√			0427, 0439, 0461
TWINGO II	Injection	√	√	√	√	√	√	0450, 0690, 0438, 0537, 0602, 0626, 0428, 0617, 0529, 0608, 0771, 0531, 0464, 0544, 0428, 0535
TWINGO II	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0503, 0649, 0428, 0738, 0186, 0428, 0621, 0631, 0741
TWINGO II	Instrument Panel	√	√	√	√		√	0180, 0291, 0262, 0291, 0139, 0428, 0243, 0254, 0143, 0245, 0278, 0255, 0247, 0246, 0279, 0733
TWINGO II	UCH	√	√	√	√		√	0080, 0094, 0281, 0283, 0271, 0282, 0285, 0273, 0053, 0107, 0118, 0327, 0428, 0099, 0286, 0124, 0212, 0134, 0116, 0127

TWINGO II	Airbag / Pretensioners(SRS)	√	√	√	√			0299, 0300, 0314, 0315, 0317, 0319, 0341, 0347, 0348, 0353, 0356, 0357, 0366, 0367, 0372, 0428, 0645, 0660
TWINGO II	Air Conditioning(AC)	√	√	√	√		√	0106, 0157, 0225, 0428
TWINGO II	Automatic Gearbox(AT)	√	√	√	√		√	0429, 0443, 0454, 0488, 0666, 0674, 0692, 0697
TWINGO II	Rev Counter/Symbol	√	√		√		√	0034, 0022, 0027, 0037, 0008
TWINGO II	RADIO	√	√	√	√		√	0081, 0035, 0087, 0707, 0452, 0465, 0112, 0469, 0436, 0081, 0622
TWINGO II	Multimedia Interface	√	√	√	√		√	0014, 0049, 0051, 0072, 0428
TWINGO II	VARIABLE P.A.S.	√	√	√	√			0428, 0183, 0183, 0428
TWINGO II	Parking Assistance	√	√	√	√			0614, 0428, 0041, 0003, 0045
TWINGO III	Injection	√	√	√	√	√	√	0450, 0482, 0582, 0559, 0537, 0847, 0428, 0529, 0848, 0771, 0551, 0550, 0531, 0574, 0544, 0841, 0598, 0840, 0535, 0513, 0567
TWINGO III	Anti-lock Brake System(ABS)	√	√	√	√	√	√	0191, 0190, 0490, 0192, 0492, 0791, 0428, 0507, 0188, 0498, 0486, 0428, 0621, 0786, 0753, 0788, 0777, 0787
TWINGO III	Instrument Panel	√	√	√	√		√	0292, 0428, 0231, 0245, 0093, 0248
TWINGO III	UCH	√	√	√	√	√	√	0107, 0327, 0428, 0053, 0138, 0358
TWINGO III	Airbag / Pretensioners(SRS)	√	√	√	√		√	0428, 0703, 0174, 0660, 0428, 0645
TWINGO III	Front Radar	√	√	√	√			0428
TWINGO III	Air Conditioning(AC)	√	√	√	√		√	0428, 0625, 0634
TWINGO III	Automatic Gearbox(AT)	√	√	√	√	√	√	0066, 0454, 0461, 0493, 0666, 0748, 0750, 0755, 0757, 0758
TWINGO III	Communications Unit	√	√	√	√	√	√	0017, 0437, 0129, 0161, 0461, 0461, 0159, 0468
TWINGO III	VARIABLE P.A.S.	√	√	√	√	√	√	0428
TWINGO III	UPC	√	√	√	√		√	0149, 0648, 0162, 0494, 0651, 0514, 0457, 0754
TWINGO III	Adaptation Unit	√	√	√	√			0200, 0202, 0440
TWINGO III	Central GateWay	√	√	√	√	√		0004, 0428
TWINGO III	Gearbox Elec Control	√	√	√				0428
TWINGO III	Front Camera	√	√	√	√			0437, 0428
TWINGO III	RADIO	√	√	√	√		√	0182, 0172, 0087, 0182, 0090, 0779, 0452, 0176, 0465, 0179, 0487, 0112, 0178, 0469, 0622
TWINGO III	Telematic CTRL Unit	√	√	√	√		√	0426, 0725, 0717, 0452, 0709, 0426, 0458, 0699, 0732
TWINGO III	Multimedia Interface	√	√	√	√		√	0428, 0448, 0469
TWINGO phase 2	Injection	√	√	√	√		√	0428, 0471, 0667, 0690
TWINGO phase 2	Anti-lock Brake System(ABS)	√	√	√				
TWINGO phase 2	UCH	√	√	√				
TWINGO phase 2	Airbag / Pretensioners(SRS)	√	√	√				
TWINGO phase 2	Automatic Gearbox(AT)	√	√	√				
TWINGO phase 2	Engine(petrol)	√	√	√				

TWIZY	Instrument Panel	√	√	√	√			0242, 0245, 0325, 0326, 0328, 0331, 0428, 0678, 0688
TWIZY	Adaptation Unit	√	√	√	√			0440, 0712
TWIZY	BMS	√	√	√	√			0428
TWIZY	UCH	√	√	√	√		√	0267, 0428
TWIZY	Airbag / Pretensioners(SRS)	√	√	√	√			0096, 0100, 0137, 0299, 0300, 0302, 0341, 0372, 0428, 0645, 0660
VELSATIS	Injection	√	√	√	√		√	0115, 0681, 0482, 0471, 0771, 0471, 0652, 0123, 0776
VELSATIS	Instrument Panel	√	√	√	√		√	0261, 0260, 0241, 0262, 0680, 0163, 0177, 0254, 0672, 0231, 0253, 0135, 0256, 0255, 0258, 0257, 0235, 0678, 0655, 0259, 0092, 0171, 0093, 0250, 0175, 0251, 0163, 0261, 0646, 0428, 0243, 0287, 0242, 0146, 0245, 0167, 0244, 0148, 0247, 0665, 0246
VELSATIS	Hands - Fress KIT	√	√	√	√		√	0058, 0428, 0606, 0643
VELSATIS	Anti-lock Brake System(ABS)	√	√	√	√		√	0185, 0187, 0428, 0649, 0658
VELSATIS	UCH	√	√	√	√		√	0080, 0240, 0210, 0212, 0234, 0211, 0233, 0238, 0193, 0195, 0073, 0095, 0130, 0196, 0062, 0107, 0228, 0428, 0067, 0221, 0201, 0104, 0269, 0224, 0268, 0205, 0227, 0127, 0204
VELSATIS	Airbag / Pretensioners(SRS)	√	√	√	√			0668, 0428, 0372, 0372, 0660, 0668, 0645
VELSATIS	Front Radar	√	√	√	√			0031, 0039, 0044, 0428, 0459, 0472
VELSATIS	Air Conditioning(AC)	√	√	√	√		√	0217, 0170, 0428, 0184, 0157, 0214, 0216
VELSATIS	Automatic Gearbox(AT)	√	√	√	√		√	
VELSATIS	Gas Injection	√	√	√	√		√	0049, 0428
VELSATIS	Tyres	√	√	√	√		√	0042, 0440, 0716, 0740
VELSATIS	Discharge Lamp	√	√	√	√		√	0005, 0428, 0030, 0030
VELSATIS	Parking Assistance	√	√	√	√			0614, 0428, 0041, 0003, 0045, 0003, 0614
VELSATIS	Heater	√	√	√	√		√	0427, 0439, 0461
VELSATIS ph2	Injection	√	√	√	√		√	0438, 0115, 0450, 0681, 0482, 0471, 0771, 0652, 0123, 0776
VELSATIS ph2	Instrument Panel	√	√	√	√		√	0261, 0260, 0241, 0262, 0680, 0163, 0177, 0254, 0672, 0231, 0253, 0135, 0256, 0255, 0258, 0257, 0235, 0678, 0655, 0259, 0092, 0171, 0093, 0250, 0175, 0251, 0163, 0261, 0646, 0428, 0243, 0287, 0242, 0146, 0245, 0167, 0244, 0148, 0247, 0665, 0246
VELSATIS ph2	Gas Injection	√	√	√	√		√	0049, 0428
VELSATIS ph2	Lighting	√	√	√	√		√	0014, 0018, 0023, 0033, 0040, 0428, 0612

VELSATIS ph2	Parking PROX CAN	√	√	√	√			0003, 0041, 0045, 0047, 0057, 0428, 0614, 0649
VELSATIS ph2	Communications Unit	√	√	√	√		√	0449, 0437, 0428, 0014, 0628, 0428
VELSATIS ph2	Hands - Fress KIT	√	√	√	√		√	0058, 0428, 0606, 0643
VELSATIS ph2	RADIO	√	√	√	√		√	0090, 0109, 0452, 0452, 0430, 0622
VELSATIS ph2	Anti-lock Brake System(ABS)	√	√	√	√		√	0490, 0492, 0186, 0185, 0186, 0490, 0658, 0649, 0428, 0738, 0760, 0187, 0762, 0486, 0631, 0741
VELSATIS ph2	UCH	√	√	√	√		√	0080, 0280, 0062, 0240, 0053, 0218, 0234, 0134, 0138, 0193, 0195, 0095, 0293, 0197, 0274, 0130, 0207, 0107, 0206, 0228, 0428, 0067, 0441, 0661, 0121, 0104, 0203, 0224, 0268, 0127
VELSATIS ph2	Airbag / Pretensioners(SRS)	√	√	√	√			
VELSATIS ph2	Air Conditioning(AC)	√	√	√	√		√	
VELSATIS ph2	Parking Assistance	√	√	√	√			0614, 0428, 0041, 0003, 0045, 0003, 0614
VELSATIS ph2	Heater	√	√	√	√		√	0427, 0439, 0461
WIND	Injection	√	√	√	√		√	
WIND	Anti-lock Brake System(ABS)	√	√	√	√		√	0658, 0503, 0649, 0428, 0738, 0186, 0428, 0621, 0631, 0741
WIND	Instrument Panel	√	√	√	√		√	0093, 0152, 0231, 0245, 0247, 0253, 0255, 0297, 0298, 0428, 0680
WIND	UCH	√	√	√	√		√	0080, 0094, 0281, 0283, 0271, 0282, 0285, 0053, 0107, 0118, 0327, 0428, 0099, 0286, 0124, 0212, 0134, 0304, 0116, 0127
WIND	Airbag / Pretensioners(SRS)	√	√	√	√			0169, 0173, 0299, 0300, 0317, 0319, 0341, 0353, 0366, 0367, 0372, 0428, 0645, 0660
WIND	Air Conditioning(AC)	√	√	√	√		√	0106, 0157, 0225, 0428
WIND	Sunroof Control Unit	√	√	√	√	√		0428
WIND	RADIO	√	√	√	√		√	0452, 0622
WIND	Multimedia Interface	√	√	√	√		√	0049, 0051, 0072, 0428
WIND	Multimedia Connection	√	√	√	√			0013, 0428, 0606
WIND	VARIABLE P.A.S.	√	√	√	√			0428, 0183
ZOE	Instrument Panel		√	√	√		√	×
ZOE	UCH		√	√	√		√	×
ZOE	Airbag / Pretensioners (SRS)		√	√	√		√	×

ZOE	Air Condi oning(AC)	√	√	√	√		x
ZOE	VARIA BLE P.A.S	√	√	√	√	√	x
ZOE	UPC	√	√	√	√		x
ZOE	Adapta tion Unit	√	√	√	√		
ZOE	Parkin g PRO √ CAN	√	√	√	√		x
ZOE	Telema tic CTRL Unit	√	√	√	√		x
ZOE	Uncou pled Pedal	√	√	√	√	√	x
ZOE	Multim edia Interfa ce	√	√	√	√		x
ZOE	BCB	√	√	√	√	√	
ZOE	BMS	√	√	√	√	√	
ZOE	EVC	√	√	√	√	√	x
ZOE	PEB	√	√	√	√	√	
ZOE	BMS SAFETY	√					
ZOE	Comm unicati ons Unit	√	√	√	√		x
ZOE	RADIO	√	√	√	√		x

Special Function Table

0001	Configuration Read/Write[CF001 Alternator Type]
0002	Configuration Read/Write[CF001 Bms]
0003	Configuration Read/Write[CF001 Buzzer Volume]
0004	Configuration Read/Write[CF001 Central Gateway]
0005	Configuration Read/Write[CF001 Computer Calibration]
0006	Configuration Read/Write[CF001 Computer Initialisation]
0007	Configuration Read/Write[CF001 Configuration Privee 1]

0008	Configuration Read/Write[CF001 Overspeed Light]
0009	Configuration Read/Write[CF001 Power Back Door Cylinder]
0010	Configuration Read/Write[CF001 Roll Bars]
0011	Configuration Read/Write[CF001 Subwoofer]
0012	Configuration Read/Write[CF001 Svt Configuration]
0014	Configuration Read/Write[CF001 Vehicle Type]
0015	Configuration Read/Write[CF001 Window Winder 1 Deconfiguration]
0016	Configuration Read/Write[CF002 Computer Configuration]
0017	Configuration Read/Write[CF002 Country Model]
0018	Configuration Read/Write[CF002 Dynamic Correction]
0019	Configuration Read/Write[CF002 Instrument Panel]
0020	Configuration Read/Write[CF002 Language Configuration]
0021	Configuration Read/Write[CF002 Temperature Display]
0022	Configuration Read/Write[CF002 Trajectory Control]
0023	Configuration Read/Write[CF003 Automatic Fold-Down Headlights]
0024	Configuration Read/Write[CF003 Charge Plug]
0025	Configuration Read/Write[CF003 Computer Configuration]
0026	Configuration Read/Write[CF003 Heating]
0027	Configuration Read/Write[CF003 Rheostat Lighting]
0028	Configuration Read/Write[CF003 Testing Card Presented]
0029	Configuration Read/Write[CF003 Time Format]
0030	Configuration Read/Write[CF003 Vehicle Type]
0031	Configuration Read/Write[CF003 Write Date Of Last After Sales Operation]
0032	Configuration Read/Write[CF004 Computer Address]
0033	Configuration Read/Write[CF004 Dipped Headlights Raise]
0034	Configuration Read/Write[CF004 Free Shift]
0035	Configuration Read/Write[CF004 System Configuration]
0036	Configuration Read/Write[CF005 Distance Before Next Oil Change Configuration]
0037	Configuration Read/Write[CF005 Free Shift Display]
0038	Configuration Read/Write[CF005 Hour Setting]
0039	Configuration Read/Write[CF005 Km]
0040	Configuration Read/Write[CF005 Signature]
0041	Configuration Read/Write[CF005 Vehicle Identification]
0042	Configuration Read/Write[CF005 Vehicle Type]
0043	Configuration Read/Write[CF006 Cornering Lights]
0044	Configuration Read/Write[CF006 Miles]
0045	Configuration Read/Write[CF006 Tone Adjustment]
0046	Configuration Read/Write[CF006 Vehicle Speed Signal Transmitter]
0047	Configuration Read/Write[CF007 Front Buzzer Volume]
0048	Configuration Read/Write[CF007 System Configuration]
0049	Configuration Read/Write[CF007 Vehicle Configuration]
0050	Configuration Read/Write[CF008 Configuration Privee 4]
0051	Configuration Read/Write[CF008 Radio]
0052	Configuration Read/Write[CF009 Configuration Privee 1]
0054	Configuration Read/Write[CF009 Driving Type]

0055	Configuration Read/Write[CF009 External Components]
0056	Configuration Read/Write[CF009 Front Seat Belt Retractors]
0057	Configuration Read/Write[CF009 Front Tone Setting]
0058	Configuration Read/Write[CF009 Language]
0059	Configuration Read/Write[CF009 Navigation]
0060	Configuration Read/Write[CF009 Noise-Reducing Microphone]
0061	Configuration Read/Write[CF010 Gearbox Type]
0062	Configuration Read/Write[CF010 Hands-Free Function]
0063	Configuration Read/Write[CF010 Light Sensor Signal]
0064	Configuration Read/Write[CF010 With Fr Chest Airbags+Head-Level Airbags]
0065	Configuration Read/Write[CF011 Directional Headlights]
0066	Configuration Read/Write[CF011 Gear Change Paddles]
0067	Configuration Read/Write[CF011 Gearbox Type]
0068	Configuration Read/Write[CF011 Geographical Zone]
0069	Configuration Read/Write[CF011 Sensor Type]
0070	Configuration Read/Write[CF011 W Fr Chest Airbags W/Out Head-Lvl Airbags]
0071	Configuration Read/Write[CF012 Front Detection]
0072	Configuration Read/Write[CF012 Lighting]
0073	Configuration Read/Write[CF012 Rain Sensor]
0074	Configuration Read/Write[CF012 Without Side Airbags]
0075	Configuration Read/Write[CF013 Cd Changer]
0076	Configuration Read/Write[CF013 Front Left-Hand Chest-Level Side Airbag]
0077	Configuration Read/Write[CF013 Rear Detection]
0078	Configuration Read/Write[CF013 Trailer Stability Function]
0079	Configuration Read/Write[CF014 Computer Configuration]
0080	Configuration Read/Write[CF014 Daytime Running Lights]
0081	Configuration Read/Write[CF014 Driving Type]
0082	Configuration Read/Write[CF014 Side Detection]
0083	Configuration Read/Write[CF014 Tuning Version Number]
0084	Configuration Read/Write[CF015 Illuminate Hazard Lamps Upon Impact]
0085	Configuration Read/Write[CF015 Maintenance Mode]
0086	Configuration Read/Write[CF015 Rear Right-Hand Inertia Reel]
0087	Configuration Read/Write[CF016 Country Model]
0088	Configuration Read/Write[CF016 Rear Left-Hand Inertia Wheel]
0089	Configuration Read/Write[CF018 Automatic Relocking]
0090	Configuration Read/Write[CF018 Distance Units]
0091	Configuration Read/Write[CF018 Front Fog Lights]
0092	Configuration Read/Write[CF018 Reserve Capacity]
0094	Configuration Read/Write[CF019 Air Conditioning Type]
0095	Configuration Read/Write[CF020 Driving Type]
0096	Configuration Read/Write[CF020 Front Left-Hand Inertia Wheel]
0097	Configuration Read/Write[CF020 Increment Of Idle Speed]
0098	Configuration Read/Write[CF021 Decrement Idle Speed]
0099	Configuration Read/Write[CF021 Front Fog Lights]
0100	Configuration Read/Write[CF021 Front Right-Hand Inertia Wheel]

0101	Configuration Read/Write[CF022 Left-Hand Curtain Airbag]
0102	Configuration Read/Write[CF022 With Swirl Flap]
0103	Configuration Read/Write[CF023 Front Right-Hand Chest-Level Side Airbag]
0104	Configuration Read/Write[CF023 Tyre Pressure Monitor Function]
0105	Configuration Read/Write[CF024 Emergency Call Number]
0106	Configuration Read/Write[CF024 Geographical Zone]
0107	Configuration Read/Write[CF024 Hazard Warning Lights Illumination By Abs]
0108	Configuration Read/Write[CF024 Right-Hand Curtain Airbag]
0109	Configuration Read/Write[CF026 Cd Changer And Auxiliary Input]
0110	Configuration Read/Write[CF026 System Configuration]
0111	Configuration Read/Write[CF027 Gearbox Type]
0112	Configuration Read/Write[CF027 Language]
0113	Configuration Read/Write[CF027 Left-Hand Side Impact Sensor]
0114	Configuration Read/Write[CF027 Windscreen Type]
0115	Configuration Read/Write[CF028 Air Conditioning]
0116	Configuration Read/Write[CF028 Engine Type]
0117	Configuration Read/Write[CF028 Testing Card Presented]
0118	Configuration Read/Write[CF029 External Temperature Sensor]
0119	Configuration Read/Write[CF029 Power Steering Electric Pump Unit]
0120	Configuration Read/Write[CF029 Right-Hand Side Impact Sensor]
0121	Configuration Read/Write[CF030 Discharge Lamp]
0122	Configuration Read/Write[CF030 Front Left-Hand Seat Belt Sensor]
0123	Configuration Read/Write[CF030 Thermoplungers]
0124	Configuration Read/Write[CF031 Calibration]
0125	Configuration Read/Write[CF031 Front Right-Hand Seat Belt Sensor]
0126	Configuration Read/Write[CF032 Remote Engine Starting]
0127	Configuration Read/Write[CF032 See-Me-Home Lighting]
0128	Configuration Read/Write[CF033 Column Steering Lock]
0129	Configuration Read/Write[CF033 Distance Units]
0130	Configuration Read/Write[CF033 Electric Child Safety]
0131	Configuration Read/Write[CF034 Bodywork Type]
0132	Configuration Read/Write[CF034 Constructor/Manufacturer]
0134	Configuration Read/Write[CF035 Rain/Light Sensor]
0135	Configuration Read/Write[CF035 Tank Capacity]
0136	Configuration Read/Write[CF036 Card/Key]
0137	Configuration Read/Write[CF036 Pass Airbag Deactivation Warning Light]
0138	Configuration Read/Write[CF036 Selective Opening Of Doors]
0139	Configuration Read/Write[CF037 Clock]
0140	Configuration Read/Write[CF037 Front Left-Hand Buckle Pretensioner]
0141	Configuration Read/Write[CF037 Stop&Start Function Configuration]
0142	Configuration Read/Write[CF038 Front Right-Hand Buckle Pretensioner]
0143	Configuration Read/Write[CF038 Rheostat Presence]
0144	Configuration Read/Write[CF039 Esm Configuration]
0145	Configuration Read/Write[CF039 Gsm Connectivity]
0146	Configuration Read/Write[CF039 Uch]

0147	Configuration Read/Write[CF040 Gsm Antenna Circuit]
0148	Configuration Read/Write[CF040 Particle Filter]
0149	Configuration Read/Write[CF040 Stop And Start Configuration]
0150	Configuration Read/Write[CF041 Angle Of Assembly]
0151	Configuration Read/Write[CF042 Boiler]
0152	Configuration Read/Write[CF042 Drive Type Configuration]
0153	Configuration Read/Write[CF043 Esm Inhibition Command]
0154	Configuration Read/Write[CF043 System Configuration]
0155	Configuration Read/Write[CF044 Esm Activation Command]
0156	Configuration Read/Write[CF044 Gsm Antenna]
0157	Configuration Read/Write[CF044 Vehicle Type]
0158	Configuration Read/Write[CF045 Alternator Floating Voltage]
0159	Configuration Read/Write[CF045 Tyre Pressure Units]
0160	Configuration Read/Write[CF046 Gas Reserv. Capac.]
0161	Configuration Read/Write[CF046 Language]
0162	Configuration Read/Write[CF046 Multiple 12V Batteries]
0163	Configuration Read/Write[CF047 Adaptive Cruise Control]
0164	Configuration Read/Write[CF047 Stop And Start Function]
0165	Configuration Read/Write[CF047 Without Inhibition Switch]
0166	Configuration Read/Write[CF048 Seat Belt Reminder Buzzer]
0167	Configuration Read/Write[CF049 Oil Pressure Warning Threshold]
0168	Configuration Read/Write[CF049 Seat Belt Light]
0169	Configuration Read/Write[CF050 Driver'S Front Inertia Reel]
0170	Configuration Read/Write[CF050 Heated Windscreen]
0171	Configuration Read/Write[CF050 Oil Temperature Measurement Threshold]
0172	Configuration Read/Write[CF050 Time Format]
0174	Configuration Read/Write[CF052 Sensor Configuration]
0175	Configuration Read/Write[CF053 Oil Measurement Timer]
0176	Configuration Read/Write[CF053 Rear Loud Speaker]
0177	Configuration Read/Write[CF054 Parking Proximity Sensor Function]
0178	Configuration Read/Write[CF055 Temperature Units]
0179	Configuration Read/Write[CF056 Tyre Pressure Units]
0180	Configuration Read/Write[CF058 Adac Configuration]
0181	Configuration Read/Write[CF058 Type]
0182	Configuration Read/Write[CF066 Guidelines]
0183	Configuration Read/Write[CF073 Mode Number]
0184	Configuration Read/Write[CF076 Compressor Type]
0185	Configuration Read/Write[CF077 Abs/Esp Calibration]
0186	Configuration Read/Write[CF079 Gearbox Type]
0187	Configuration Read/Write[CF080 Vehicle Parameters]
0188	Configuration Read/Write[CF083 Commande Privee 1]
0189	Configuration Read/Write[CF083 One-Touch Electric Window(S)]
0190	Configuration Read/Write[CF084 Commande Privee 2]
0191	Configuration Read/Write[CF085 Commande Privee 3]
0192	Configuration Read/Write[CF086 Commande Privee 4]

0193	Configuration Read/Write[CF088 Auto Locking Warning Sound]
0194	Configuration Read/Write[CF088 Computer Calibration]
0195	Configuration Read/Write[CF089 Memorising Driver'S Seat Position]
0196	Configuration Read/Write[CF090 Deadlocking]
0197	Configuration Read/Write[CF091 Sunroof]
0198	Configuration Read/Write[CF092 Pulling Correction Program]
0199	Configuration Read/Write[CF093 Pulling Correction]
0200	Configuration Read/Write[CF093 Vehicle Layout]
0201	Configuration Read/Write[CF094 Automatic Seat Recall]
0202	Configuration Read/Write[CF094 Mode]
0203	Configuration Read/Write[CF097 Vehicle Type]
0204	Configuration Read/Write[CF098 Card Locking]
0205	Configuration Read/Write[CF099 Card Reminder Warning]
0206	Configuration Read/Write[CF100 Hands-Free Start-Up]
0207	Configuration Read/Write[CF101 Light Sensor Sensitivity]
0208	Configuration Read/Write[CF103 Alternator Type]
0209	Configuration Read/Write[CF104 Childproof Lock]
0210	Configuration Read/Write[CF106 Interior Lighting]
0211	Configuration Read/Write[CF107 Timer Courtesy Light]
0212	Configuration Read/Write[CF108 Automatic Locking When Driving]
0214	Configuration Read/Write[CF110 Drive Ratio]
0215	Configuration Read/Write[CF110 Tailgate Flap]
0216	Configuration Read/Write[CF111 Type Of Power Steering]
0217	Configuration Read/Write[CF112 Evaporator Temperature Sensor]
0218	Configuration Read/Write[CF112 Headlight Washers]
0219	Configuration Read/Write[CF113 Additional Heating]
0220	Configuration Read/Write[CF114 Air Conditioning Type]
0221	Configuration Read/Write[CF115 Door Unlocking Mode]
0222	Configuration Read/Write[CF115 Rear Shelves]
0223	Configuration Read/Write[CF116 Driving Type]
0224	Configuration Read/Write[CF116 Hands Free Locking]
0225	Configuration Read/Write[CF117 Heating Resistor Type]
0226	Configuration Read/Write[CF118 Toxicity Sensor]
0227	Configuration Read/Write[CF119 Unlocking Mode. Doors Hands Free]
0228	Configuration Read/Write[CF120 Automatic Closing Of Windows (By Card)]
0229	Configuration Read/Write[CF122 Bodywork Type]
0230	Configuration Read/Write[CF125 Compressor Feedback]
0231	Configuration Read/Write[CF125 Language Version.]
0232	Configuration Read/Write[CF130 Number Of Heating Elements]
0233	Configuration Read/Write[CF130 Overspeed Alarm For Arabia]
0234	Configuration Read/Write[CF131 Voice Synthesiser]
0235	Configuration Read/Write[CF132 Engine/Gearbox Type]
0236	Configuration Read/Write[CF132 Vehicle Family]
0237	Configuration Read/Write[CF133 Configuration Privee 1]
0238	Configuration Read/Write[CF133 Power-Assisted Steering Program]

0239	Configuration Read/Write[CF134 Temperature Units]
0240	Configuration Read/Write[CF134 Type Of Power Steering]
0241	Configuration Read/Write[CF136 Tyre Pressure Units]
0242	Configuration Read/Write[CF137 Vehicle Type]
0243	Configuration Read/Write[CF138 Fuel Type]
0244	Configuration Read/Write[CF139 Voice Synthesiser]
0245	Configuration Read/Write[CF140 Distance Units]
0246	Configuration Read/Write[CF141 Overspeed Function - Arabia]
0247	Configuration Read/Write[CF142 Trajectory Control]
0248	Configuration Read/Write[CF143 Consumption Measurement Units]
0249	Configuration Read/Write[CF144 Hands Free]
0250	Configuration Read/Write[CF145 Tyre Pressure Monitoring]
0251	Configuration Read/Write[CF146 Automatic Handbrake]
0252	Configuration Read/Write[CF147 Navigation System]
0254	Configuration Read/Write[CF149 Gearbox Type]
0255	Configuration Read/Write[CF150 Cruise Ctrl/Spd Limiter]
0256	Configuration Read/Write[CF152 P9X At]
0257	Configuration Read/Write[CF153 P9X Manual]
0258	Configuration Read/Write[CF154 V4Y Automatic Gearbox]
0259	Configuration Read/Write[CF155 V4Y Manual]
0260	Configuration Read/Write[CF156 Other At]
0261	Configuration Read/Write[CF157 Other Manual]
0262	Configuration Read/Write[CF158 Seat Belt Reminder Buzzer]
0263	Configuration Read/Write[CF159 Engine Immobiliser]
0264	Configuration Read/Write[CF160 Overspeed Alarm]
0265	Configuration Read/Write[CF163 Head Lamp Battery Saver Function]
0266	Configuration Read/Write[CF166 Rear Screen Wiper]
0267	Configuration Read/Write[CF167 Flashing Buzzer]
0268	Configuration Read/Write[CF169 Lights Automatic Illumination]
0269	Configuration Read/Write[CF170 Overspeed Function - Arabia]
0270	Configuration Read/Write[CF171 Parking Aid]
0271	Configuration Read/Write[CF171 Temperature Display]
0272	Configuration Read/Write[CF172 Directional Headlights]
0273	Configuration Read/Write[CF173 One-Touch Electric Window(S) / Sunroof]
0274	Configuration Read/Write[CF174 Inhibition Of Selective Door Opening]
0275	Configuration Read/Write[CF175 Commande Privee 1]
0276	Configuration Read/Write[CF179 Rev Counter]
0277	Configuration Read/Write[CF179 Seat Belt Reminder Buzzer]
0278	Configuration Read/Write[CF180 External Temperature]
0279	Configuration Read/Write[CF181 Electric Power Assisted Steering]
0280	Configuration Read/Write[CF186 Automatic Folding Of Door Mirrors]
0281	Configuration Read/Write[CF191 Wiper Intermittent Speed Ring]
0282	Configuration Read/Write[CF192 Opening Elements Central Locking]
0283	Configuration Read/Write[CF193 Automatic Lighting Function]
0284	Configuration Read/Write[CF193 Oil Vapour Heater]

0285	Configuration Read/Write[CF194 Automatic Front Wiper Function]
0286	Configuration Read/Write[CF195 Key Type]
0287	Configuration Read/Write[CF196 Cruise Contr./Sp. Limit. Speed Diff.]
0288	Configuration Read/Write[CF196 Stop And Start Function]
0289	Configuration Read/Write[CF197 New Vehicle Storage Mode Deactivation]
0290	Configuration Read/Write[CF197 Tyre Pressure Monitor Function]
0291	Configuration Read/Write[CF198 Personalised Oil Change Frequency]
0292	Configuration Read/Write[CF199 Computer Initialisation]
0294	Configuration Read/Write[CF202 Free Shift]
0295	Configuration Read/Write[CF207 Driver'S Lateral Sensor]
0296	Configuration Read/Write[CF208 Passenger'S Lateral Sensor]
0297	Configuration Read/Write[CF208 Seat Belt Warning Module]
0298	Configuration Read/Write[CF209 Computer Initialisation]
0299	Configuration Read/Write[CF209 Driver'S Front Airbag]
0300	Configuration Read/Write[CF210 Passenger'S Front Airbag]
0301	Configuration Read/Write[CF210 Unit Of Volume]
0302	Configuration Read/Write[CF211 Impact Information Connection]
0303	Configuration Read/Write[CF212 Type Of Parking Brake]
0304	Configuration Read/Write[CF213 Gradual Switching On And Off Of Courtesy Light]
0305	Configuration Read/Write[CF213 Tachograph]
0306	Configuration Read/Write[CF214 Abs/Esp]
0307	Configuration Read/Write[CF215 Tyres]
0308	Configuration Read/Write[CF215 Vehicle Type]
0309	Configuration Read/Write[CF216 Free Shift Display]
0310	Configuration Read/Write[CF217 Driver Lap Strap Pretensioner]
0311	Configuration Read/Write[CF217 Pointer Animation]
0312	Configuration Read/Write[CF218 Daytime Backlights]
0313	Configuration Read/Write[CF218 Passenger Lap Strap Pretensioner]
0314	Configuration Read/Write[CF221 Curtain Side Air Bag, Driver'S Side]
0315	Configuration Read/Write[CF222 Curtain Side Air Bag, Passenger Side]
0316	Configuration Read/Write[CF223 Configuration Reservee 10]
0317	Configuration Read/Write[CF223 Front Thorax Side Air Bag, Driver Side]
0318	Configuration Read/Write[CF224 Electric Pump Unit]
0319	Configuration Read/Write[CF224 Front Thorax Side Air Bag, Passenger Side]
0320	Configuration Read/Write[CF224 Rear Access Aerials]
0321	Configuration Read/Write[CF225 Battery Charge Warning Information]
0322	Configuration Read/Write[CF225 Rear Thorax Side Air Bag, Driver Side]
0323	Configuration Read/Write[CF226 Rear Thorax Side Air Bag, Passenger Side]
0324	Configuration Read/Write[CF227 Remote Locking Buzzer]
0325	Configuration Read/Write[CF227 Traction Battery Range]
0326	Configuration Read/Write[CF228 Traction Battery Range]
0327	Configuration Read/Write[CF229 Alarm]
0328	Configuration Read/Write[CF229 Gear Positions Memorization]
0329	Configuration Read/Write[CF229 Passenger Front Air Bag Circuit 2]
0330	Configuration Read/Write[CF230 Driver Front Air Bag Circuit 1]

0331	Configuration Read/Write[CF230 Econometer]
0332	Configuration Read/Write[CF231 Driver Front Air Bag Circuit 2]
0334	Configuration Read/Write[CF236 Passenger Front Air Bag Circuit 1]
0335	Configuration Read/Write[CF241 Language Configuration]
0336	Configuration Read/Write[CF244 Fuel Flap Locking]
0337	Configuration Read/Write[CF245 Hill Start]
0338	Configuration Read/Write[CF246 Improved Grip Function]
0339	Configuration Read/Write[CF247 Stop And Start Configuration]
0340	Configuration Read/Write[CF248 Buzzer]
0341	Configuration Read/Write[CF248 Passenger Air Bag Locking Mode]
0342	Configuration Read/Write[CF253 Rear Wiper/Reverse Gear Connection]
0343	Configuration Read/Write[CF253 Voltmeter]
0344	Configuration Read/Write[CF254 Ammeter]
0345	Configuration Read/Write[CF255 Language Version.]
0346	Configuration Read/Write[CF256 Water Temperature]
0347	Configuration Read/Write[CF265 Driver'S Front Buckle Pretensioner]
0348	Configuration Read/Write[CF266 Passenger'S Front Buckle Pretensioner]
0349	Configuration Read/Write[CF267 Passenger Compartment Heating Resistor]
0350	Configuration Read/Write[CF268 Raising Of Elect. Window(With Anti-Pinch)]
0351	Configuration Read/Write[CF270 Scandinavian Runnings Lights]
0352	Configuration Read/Write[CF272 Sdo]
0353	Configuration Read/Write[CF273 Driver'S Seat Buckle Sensor]
0354	Configuration Read/Write[CF273 Timed Lighting Supply]
0355	Configuration Read/Write[CF274 Dongle]
0356	Configuration Read/Write[CF274 Passenger'S Seat Buckle Sensor]
0357	Configuration Read/Write[CF275 Passenger Presence Detection Sensor]
0358	Configuration Read/Write[CF275 Second Fitting Alarm]
0359	Configuration Read/Write[CF276 Rear Screen Demister]
0360	Configuration Read/Write[CF277 Indicator Light Configuration]
0361	Configuration Read/Write[CF278 Rear Inertia Reels]
0362	Configuration Read/Write[CF281 Heated Rear Screen Indicator Light Circuit]
0363	Configuration Read/Write[CF282 Passenger'S Lap Strap/Seat Airbag]
0364	Configuration Read/Write[CF283 Driver'S Lap Strap/Seat Airbag]
0365	Configuration Read/Write[CF284 Front Buckle Pretensimeters]
0366	Configuration Read/Write[CF285 Driver'S Front Side Impact Sensor]
0367	Configuration Read/Write[CF286 Passenger'S Front Side Impact Sensor]
0368	Configuration Read/Write[CF287 Column Steering Lock]
0369	Configuration Read/Write[CF289 Driver'S Seat Position Sensor]
0370	Configuration Read/Write[CF289 Load Area]
0371	Configuration Read/Write[CF290 Steering Lock]
0372	Configuration Read/Write[CF291 Side On Which Steering Wheel Fitted]
0374	Configuration Read/Write[CF292 Trailer Present]
0375	Configuration Read/Write[CF293 Driver'S Side Rear Strap Sensor]
0376	Configuration Read/Write[CF293 Interior Ambience Lighting]
0377	Configuration Read/Write[CF294 Driver' Side Rear Frontal Airbag]

0378	Configuration Read/Write[CF294 Remote Engine Starting]
0379	Configuration Read/Write[CF295 Hands-Free Deadlocking]
0380	Configuration Read/Write[CF295 Passenger Side Rear Frontal Airbag]
0381	Configuration Read/Write[CF296 Deadlocking With Remote Control On Key]
0382	Configuration Read/Write[CF297 B/C Without Side Airbags]
0383	Configuration Read/Write[CF297 Wiping Learning]
0384	Configuration Read/Write[CF298 B/C With Front Thorax + Head Airbags]
0385	Configuration Read/Write[CF299 Access/Starter Type]
0386	Configuration Read/Write[CF299 B/C With Fr/Rr Thorax + Head Airbags]
0387	Configuration Read/Write[CF300 G/S With Head Airbags]
0388	Configuration Read/Write[CF300 Stop And Start Configuration]
0389	Configuration Read/Write[CF301 G/S Without Head Airbag]
0390	Configuration Read/Write[CF301 Rear Wiper Information]
0391	Configuration Read/Write[CF302 J Without Side Airbags]
0392	Configuration Read/Write[CF303 J With Side Ab W/O Rear Chest Ab]
0393	Configuration Read/Write[CF304 Accelerated Idle]
0394	Configuration Read/Write[CF305 E With Side Airbags]
0395	Configuration Read/Write[CF305 Heated Rear Screen Via Injection System]
0396	Configuration Read/Write[CF306 E Without Side Airbags]
0397	Configuration Read/Write[CF306 Pchr Number Controlled]
0398	Configuration Read/Write[CF307 Computer Configuration]
0399	Configuration Read/Write[CF307 K/L Without Side Airbags]
0400	Configuration Read/Write[CF308 K/L With F Chest + Curt Airbags]
0401	Configuration Read/Write[CF309 Air Conditioning Management]
0402	Configuration Read/Write[CF309 K/L With F/R Chest + Curt Airbags]
0403	Configuration Read/Write[CF310 Steering Lock]
0404	Configuration Read/Write[CF311 Remote Engine Starting]
0405	Configuration Read/Write[CF312 Vehicle Type]
0406	Configuration Read/Write[CF313 Make]
0407	Configuration Read/Write[CF314 Stop And Start Function]
0408	Configuration Read/Write[CF314 Trajectory Control]
0409	Configuration Read/Write[CF315 Check Motor Torque By Abs]
0410	Configuration Read/Write[CF315 Power Back Door]
0411	Configuration Read/Write[CF316 Automatic Rear Wiper Function]
0412	Configuration Read/Write[CF316 Selector Lever Locking]
0414	Configuration Read/Write[CF320 Note Oil Wear Counter]
0415	Erase[Fault Memory]
0416	Erase[R00017 Self Diag Clear]
0417	Erase[R001 Self Diag Clear]
0418	Erase[RZ00001 Self Diag Clear]
0419	Erase[RZ00003 Self Diag Clear]
0420	Erase[RZ00004 Self Diag Clear]
0421	Erase[RZ00006 Self Diag Clear]
0422	Erase[RZ00022 Self Diag Clear]
0423	Erase[RZ00029 Self Diag Clear]

0424	Erase[RZ001 Adblue Tank Programming]
0425	Erase[RZ001 Brake Pedal Position 1 And 2 Sensor Status Offset]
0426	Erase[RZ001 Computer Reset]
0427	Erase[RZ001 Erase Overheating Counter]
0428	Erase[RZ001 Fault Memory]
0429	Erase[RZ001 Fault/S Memorised]
0430	Erase[RZ001 Test Parameters]
0431	Erase[RZ001 Vacuum Pump Ageing Counter]
0432	Erase[RZ002 Adblue Pump Module Programming]
0433	Erase[RZ002 Computer Reinitialisation]
0434	Erase[RZ002 Computer Reset]
0435	Erase[RZ002 Cruise Control/Speed Limiter Programming]
0436	Erase[RZ002 Customer Settings And Details]
0437	Erase[RZ002 Ecu Memory]
0438	Erase[RZ002 Egr Adaptives]
0439	Erase[RZ002 Erase Incorrect Cranking Counter]
0440	Erase[RZ002 Fault Memory]
0441	Erase[RZ002 Following Tyre Change]
0442	Erase[RZ002 Inverter Fan Assembly]
0443	Erase[RZ002 Programmed Values]
0444	Erase[RZ002 Shoe Lining Energy Counter]
0445	Erase[RZ002 Traction Battery Lock]
0446	Erase[RZ003 Actuator Relay Control]
0447	Erase[RZ003 Adblue Injector Programming]
0448	Erase[RZ003 Computer Reset]
0449	Erase[RZ003 Customer Settings And Details]
0450	Erase[RZ003 Engine Adaptives]
0451	Erase[RZ003 Esp Sensor Programming]
0452	Erase[RZ003 Fault Memory]
0454	Erase[RZ003 Programme Slip Point]
0455	Erase[RZ003 Traction Battery Interlock]
0456	Erase[RZ004 Amplifier Reset]
0457	Erase[RZ004 Dtc Reset]
0458	Erase[RZ004 Emergency Call Service]
0459	Erase[RZ004 Erase Stored Misalignment]
0460	Erase[RZ004 Fan Assembly]
0461	Erase[RZ004 Fault Memory]
0462	Erase[RZ004 Hands-Free Cards Low Battery Counter]
0463	Erase[RZ004 Master Cylinder Pressure Sensor Offset]
0464	Erase[RZ004 Pressure Regulation Adaptives]
0465	Erase[RZ004 Reset Radio]
0466	Erase[RZ005 Adblue Dosing Module Catalyst]
0467	Erase[RZ005 Auto-Adaptives]
0468	Erase[RZ005 Computer Reset]
0469	Erase[RZ005 Fault Memory]

0470	Erase[RZ005 Piston Pressure Sensor Offset]
0471	Erase[RZ005 Programmed Values]
0472	Erase[RZ005 Steering Angle Offset]
0473	Erase[RZ005 Traction Battery Lock]
0474	Erase[RZ006 Adblue Quality Sensor Programming]
0475	Erase[RZ006 Computer Reset]
0476	Erase[RZ006 Converter Lock Up Adaptive]
0477	Erase[RZ006 Driving Water Pump]
0478	Erase[RZ006 Fault Memory]
0479	Erase[RZ006 Self Learning Value Erase -Butane Ratio Modeling]
0480	Erase[RZ006 Steering Wheel Angle Sensor Programming]
0481	Erase[RZ007 Charge Water Pump]
0482	Erase[RZ007 Fault Memory]
0483	Erase[RZ007 Obd Memory]
0484	Erase[RZ007 Reset]
0485	Erase[RZ007 Self Learning Value Erase - Fuel Pump Pwm]
0486	Erase[RZ007 Steering Wheel Angle Offset Sensor]
0487	Erase[RZ007 Touch Screen]
0488	Erase[RZ008 Clutch Initial Closed Position]
0489	Erase[RZ008 Engine Parameter Adaptives]
0490	Erase[RZ008 Transverse Acceleration Offset Sensor]
0491	Erase[RZ008 Ubp Solenoid Valve]
0492	Erase[RZ009 Brake Pressure Offset Sensor]
0494	Erase[RZ009 Number Of Starting Cycles]
0495	Erase[RZ009 Vehicle Function Programming]
0496	Erase[RZ010 Anti-Theft Alarm Trigger S/W]
0497	Erase[RZ010 Fault Memory]
0498	Erase[RZ010 Longitudinal Acceleration Sensor Offset]
0499	Erase[RZ010 Number Of Starting]
0500	Erase[RZ010 Reinit. Extreme Cold Reverse Gear Engagement]
0501	Erase[RZ011 Calculate Battery Wear Counters]
0502	Erase[RZ011 Reset]
0503	Erase[RZ011 Sensor Offsets]
0504	Erase[RZ012 Clutch Wear]
0505	Erase[RZ012 Egr Valve Programming]
0506	Erase[RZ012 High Pressure Pump Counter]
0507	Erase[RZ012 Reset]
0508	Erase[RZ012 Stored Energy Management Data]
0509	Erase[RZ013 High Pressure Pump Counter]
0510	Erase[RZ013 Measured Application Of Rear Rh Calliper]
0511	Erase[RZ013 Reset Clutch Data]
0512	Erase[RZ013 Stop And Start Function]
0513	Erase[RZ014 Adaptives On Air Intake Flap Fault]
0514	Erase[RZ014 Fault Memory]
0515	Erase[RZ014 Measured Application Of Rear Lh Calliper]

0516	Erase[RZ014 Number Of Starting Cycles]
0517	Erase[RZ014 Reset Clutch Data Protection]
0518	Erase[RZ015 Reset Gearbox Data]
0519	Erase[RZ016 Launch Control Counter]
0520	Erase[RZ016 Stop And Start Function]
0521	Erase[RZ017 Egr Programming]
0522	Erase[RZ017 Number Of Starting Cycles]
0523	Erase[RZ018 High Pressure Pump Counter]
0524	Erase[RZ019 Programming Reinitialisation]
0525	Erase[RZ022 Erase Idle Regulation Adaptives]
0526	Erase[RZ027 Adaptive Value - Tps]
0527	Erase[RZ028 Adaptive Value - A/F Ratio]
0528	Erase[RZ030 Particle Filter Adaptives]
0529	Erase[RZ031 Programming Throttle Limits]
0530	Erase[RZ032 Air Path Programming]
0531	Erase[RZ033 Richness Regulation Programming]
0532	Erase[RZ034 Ecu Memory]
0534	Erase[RZ036 Particle Filter Relative Pressure Sensor]
0535	Erase[RZ037 Flywheel Target Programming]
0536	Erase[RZ038 Pinking Sensor Programming]
0537	Erase[RZ039 Camshaft Sensor Programming]
0538	Erase[RZ041 Fuel Flow Regulator]
0539	Erase[RZ042 Ignition Coil Adaptive]
0540	Erase[RZ043 Exhaust Injector Circuit]
0541	Erase[RZ044 Air Damper Valve Programming]
0542	Erase[RZ045 Rail Pressure Sensor Adaptives]
0543	Erase[RZ046 Injector Adaptives]
0544	Erase[RZ047 Cruise Control/Speed Limiter Programming]
0545	Erase[RZ050 Injector Adaptives]
0546	Erase[RZ051 Injector Adaptives No. 1]
0547	Erase[RZ052 Injector Adaptives No. 2]
0548	Erase[RZ053 Injector Adaptives No. 3]
0549	Erase[RZ054 Injector Adaptives No. 4]
0550	Erase[RZ061 Flywheel Target Programming]
0551	Erase[RZ062 Proportional Richness Sensor Programming]
0552	Erase[RZ063 Preheater Unit]
0553	Erase[RZ064 Alcohol Level Prog.]
0554	Erase[RZ065 Flywheel Target Programming]
0555	Erase[RZ066 Exhaust Flap Low Setting]
0556	Erase[RZ067 Low Pressure Egr Valve Programming]
0557	Erase[RZ068 Swirl Flap Programming]
0558	Erase[RZ069 Fuel Pump Programming]
0559	Erase[RZ070 Turbocharger Programming]
0560	Erase[RZ071 Manifold Pressure Sensor Programming]
0561	Erase[RZ072 Air Flowmeter Programming]

0562	Erase[RZ073 Particle Filter Pressure Diff. Sensor]
0563	Erase[RZ074 Swirl Flap]
0564	Erase[RZ075 Camshaft No. 2 Sensor Programming]
0565	Erase[RZ077 Injection Pump Adaptatives]
0566	Erase[RZ078 Starter Adaptatives]
0567	Erase[RZ079 Number Of Starting Cycles]
0568	Erase[RZ084 Egr Bypass Programming]
0569	Erase[RZ085 Idle Speed Reference]
0570	Erase[RZ087 Catalytic Converter]
0571	Erase[RZ088 Air Damper Valve Programming]
0572	Erase[RZ089 Inhibit Evap Strategy]
0574	Erase[RZ091 Waste Gate Regulation]
0575	Erase[RZ093 Injection Pump Adaptatives]
0576	Erase[RZ094 Idle Speed Learning]
0577	Erase[RZ095 Injection Time Programming]
0578	Erase[RZ096 Torque Learning]
0579	Erase[RZ097 High Pressure Pump Counter]
0580	Erase[RZ099 Stop And Start Function]
0581	Erase[RZ100 Programming Throttle Limits]
0582	Erase[RZ101 Upstream Oxygen Sensor]
0583	Erase[RZ102 Flywheel Target Programming]
0584	Erase[RZ103 Flywheel Target Programming]
0585	Erase[RZ104 Flywheel Target Programming]
0586	Erase[RZ105 Flywheel Target Programming]
0587	Erase[RZ116 Clutch End Of Travel Wiring Switch]
0588	Erase[RZ117 Richness Regulation Programming]
0589	Erase[RZ118 Starting Authorization]
0590	Erase[RZ120 Injection Pump Adaptatives]
0591	Erase[RZ123 Traction Battery Relay]
0592	Erase[RZ125 Computer Reset]
0593	Erase[RZ126 Cylinder Pressure Sensor]
0594	Erase[RZ132 Fuel Pump Priming Complete]
0595	Erase[RZ133 Rail Pressure Limiter]
0596	Erase[RZ136 Upstream Oxygen Sensor Reset]
0597	Erase[RZ137 Downstream Oxygen Sensor Reset]
0598	Erase[RZ138 Boost Pressure Wastegate Control]
0599	Erase[RZ147 Upstream Oxygen Sensor Reset]
0600	Erase[RZ148 Downstream Oxygen Sensor Reset]
0601	Other Configurations[VP001 Computer Reinitialisation]
0602	Other Configurations[VP001 Cylinder 1 Injector Code]
0603	Other Configurations[VP001 Steering Angle Sensor Initialisation]
0604	Other Configurations[VP001 Vacuum Pump Ageing Counter]
0605	Other Configurations[VP001 Write Date Of After Sales Operation]
0606	Other Configurations[VP001 Write Date Of Last After Sales Operation]
0607	Other Configurations[VP002 Adblue Small Quantity Test Metering]

0608	Other Configurations[VP002 Cylinder 2 Injector Code]
0609	Other Configurations[VP002 Parametrage Prive 1]
0610	Other Configurations[VP002 Programming Of Seat Stops]
0611	Other Configurations[VP002 Speedo Index]
0612	Other Configurations[VP002 System Initialisation]
0614	Other Configurations[VP003 Caravan Towing Distance]
0615	Other Configurations[VP003 Computer Programming/Initialisation]
0616	Other Configurations[VP003 Configuration Of System Components]
0617	Other Configurations[VP003 Cylinder 3 Injector Code]
0618	Other Configurations[VP003 Parametrage Prive 1]
0619	Other Configurations[VP003 Start Authorisation From Bms Safety]
0620	Other Configurations[VP003 Start Authorisation From Bms]
0621	Other Configurations[VP003 Steering Wheel Angle Sensor]
0622	Other Configurations[VP003 Write Date Of After Sales Operation]
0623	Other Configurations[VP004 Adblue Pressure Preparation Test]
0624	Other Configurations[VP004 Computer Initialisation]
0625	Other Configurations[VP004 Computer Reinitialisation]
0626	Other Configurations[VP004 Cylinder 4 Injector Code]
0627	Other Configurations[VP004 Inhibition Of 4-Wheel Drive Function]
0628	Other Configurations[VP004 Netherlands Legislation]
0629	Other Configurations[VP004 Parametrage Prive 1]
0630	Other Configurations[VP004 Steering Wheel Angle Sensor Programming]
0631	Other Configurations[VP004 Vehicle Parameters]
0632	Other Configurations[VP005 Adblue Spray Test]
0633	Other Configurations[VP005 Front Slide Learning]
0634	Other Configurations[VP005 Geographical Zone]
0635	Other Configurations[VP005 Increase Fuel Warning Threshold]
0636	Other Configurations[VP005 Reinstatement Of 4-Wheel Drive Function]
0637	Other Configurations[VP005 Traction Battery Lock]
0638	Other Configurations[VP005 Wheel Circumference]
0639	Other Configurations[VP005 Write Date Of After Sales Operation]
0640	Other Configurations[VP005 Write Date Of Last After Sales Operation]
0641	Other Configurations[VP006 Adblue Emptying Test]
0642	Other Configurations[VP006 Air Recirculation Flap Motor]
0643	Other Configurations[VP006 Audio Links Test]
0644	Other Configurations[VP006 Computer Calibration]
0645	Other Configurations[VP006 Lock Computer]
0646	Other Configurations[VP006 Oil Change Interval In Km]
0647	Other Configurations[VP006 Rear Slide Learning]
0648	Other Configurations[VP006 Resetting Internal Protection]
0649	Other Configurations[VP006 Write Date Of Last After Sales Operation]
0650	Other Configurations[VP007 Adblue Leak Test]
0651	Other Configurations[VP007 Computer Initialisation]
0652	Other Configurations[VP007 Decrement Idle Speed]
0654	Other Configurations[VP007 Modification Of Parameters After Initialisation]

0655	Other Configurations[VP007 Oil Change Interval In Months]
0656	Other Configurations[VP007 Parametrage Prive 2]
0657	Other Configurations[VP007 Parametrage Prive 4]
0658	Other Configurations[VP007 Speedo Index]
0659	Other Configurations[VP007 System Initialisation]
0660	Other Configurations[VP007 Unlock Computer]
0661	Other Configurations[VP007 Valve Set Selection]
0662	Other Configurations[VP008 Adblue Injector Release Test]
0663	Other Configurations[VP008 Front Slide Learning]
0664	Other Configurations[VP008 Number Of Starting 1]
0665	Other Configurations[VP008 Oil Change Range:Current Value In Km]
0666	Other Configurations[VP008 Programming Selection/Engaging Zones]
0667	Other Configurations[VP008 Unlock Injector Control]
0668	Other Configurations[VP008 Write Date Of Last After Sales Operation]
0669	Other Configurations[VP009 Adblue Backflow Pump Test]
0670	Other Configurations[VP009 Eeprom Memory Write Procedure]
0671	Other Configurations[VP009 Number Of Starting 2]
0672	Other Configurations[VP009 Oil Change Range:Current Value In Months]
0673	Other Configurations[VP009 Rear Slide Learning]
0674	Other Configurations[VP009 Write Date Of Last After Sales Operation]
0675	Other Configurations[VP010 Adblue First Filling Test]
0676	Other Configurations[VP010 Lumbar Learning]
0677	Other Configurations[VP010 Number Of Starting 3]
0678	Other Configurations[VP010 Update Odometer]
0679	Other Configurations[VP011 Eeprom Memory Write Procedure]
0680	Other Configurations[VP011 Fuel Gauge Calibration]
0681	Other Configurations[VP011 Increment Of Idle Speed]
0682	Other Configurations[VP011 Number Of Starting 4]
0683	Other Configurations[VP011 Parametrage Prive 1]
0684	Other Configurations[VP011 Steering Wheel Angle Calib.]
0685	Other Configurations[VP012 Assisted Engagement When Stationary]
0686	Other Configurations[VP012 Corrosion Battery Counter Memorised]
0687	Other Configurations[VP012 Prevention Of Electrical Consumers]
0688	Other Configurations[VP012 Write Date Of Last After Sales Operation]
0689	Other Configurations[VP013 Corrosion Battery Counter Estimated]
0690	Other Configurations[VP013 Lock Injector Control]
0691	Other Configurations[VP013 Number Plate]
0692	Other Configurations[VP013 Write Date New Clutch Fitted]
0694	Other Configurations[VP014 Brake Lining Friction Learning]
0695	Other Configurations[VP014 Change In Triggering Limit]
0696	Other Configurations[VP014 Parametrage Prive 1]
0697	Other Configurations[VP014 Write Clutch Initial Closed Position]
0698	Other Configurations[VP015 Battery Cycle Counter Memorised]
0699	Other Configurations[VP015 Computer Configuration]
0700	Other Configurations[VP015 Eeprom Memory Write Procedure]

0701	Other Configurations[VP015 Module Change]
0702	Other Configurations[VP015 Note Oil Wear Counter]
0703	Other Configurations[VP015 Parametrage Prive 1]
0704	Other Configurations[VP015 Rear Brake Unit Initialisation]
0705	Other Configurations[VP015 Restart The Computer]
0706	Other Configurations[VP016 Battery Cycle Counter Estimated]
0707	Other Configurations[VP016 Configuring The Multimedia Computer]
0708	Other Configurations[VP016 Eeprom Memory Write Procedure]
0709	Other Configurations[VP016 Internal Battery]
0710	Other Configurations[VP016 New Vehicle Storage Mode Deactivation]
0711	Other Configurations[VP016 Rear Brake Unit Repositioning]
0712	Other Configurations[VP016 Write Date Of After Sales Operation]
0713	Other Configurations[VP016 Write Transmission Oil Change Date]
0714	Other Configurations[VP017 Activate Maintenance Mode]
0715	Other Configurations[VP017 Battery Cycle Counter]
0716	Other Configurations[VP017 Change In Triggering Limit]
0717	Other Configurations[VP017 Erase Computer Memory]
0718	Other Configurations[VP017 Gearbox Type]
0719	Other Configurations[VP017 Program Clutch Open Position]
0720	Other Configurations[VP018 Deactivate Maintenance Mode]
0721	Other Configurations[VP018 Fuel Sender Calibration (Doi.)]
0722	Other Configurations[VP018 Neutral Position Programming]
0723	Other Configurations[VP018 Parametrage Prive 12]
0724	Other Configurations[VP018 Vehicle Parameters]
0725	Other Configurations[VP019 Data Transmission To Server]
0726	Other Configurations[VP019 Fuel Sender Calibration (Europe)]
0727	Other Configurations[VP019 Interior Aerial 1 Test]
0728	Other Configurations[VP019 Parametrage Prive 13]
0729	Other Configurations[VP019 Parametrage Prive 9]
0730	Other Configurations[VP019 Passenger Air Bag Locking Mode]
0731	Other Configurations[VP020 Accelerometer]
0732	Other Configurations[VP020 Encryption Key Request]
0734	Other Configurations[VP020 Interior Aerial 2 Test]
0735	Other Configurations[VP020 Parametrage Prive 14]
0736	Other Configurations[VP021 External Boot Aerial Test]
0737	Other Configurations[VP021 Parametrage Prive 15]
0738	Other Configurations[VP021 Prevention Of Stop Light Auto Illumination]
0739	Other Configurations[VP021 Reset Oil Change Counter]
0740	Other Configurations[VP021 Selection Of Valve Set]
0741	Other Configurations[VP022 Auto Stop Lights Illumination Authorisation]
0742	Other Configurations[VP022 Front Left-Hand External Aerial Test]
0743	Other Configurations[VP022 Injection Prohibition]
0744	Other Configurations[VP022 Parametrage Prive 1]
0745	Other Configurations[VP023 Esp Automatic Reconnection Threshold]
0746	Other Configurations[VP023 Front Right-Hand External Aerial Test]

0747	Other Configurations[VP023 Parametrage Prive 2]
0748	Other Configurations[VP023 Shift Drum Reference Position]
0749	Other Configurations[VP024 Parametrage Prive 3]
0750	Other Configurations[VP024 Program Clutch Assembly]
0751	Other Configurations[VP025 Parametrage Prive 4]
0752	Other Configurations[VP025 Program Clutch Adjustment]
0753	Other Configurations[VP025 Transverse Acceleration Sensor]
0754	Other Configurations[VP026 Control Headlight Motors]
0755	Other Configurations[VP026 Programme Clutch Position]
0756	Other Configurations[VP026 Slope Sensor Adjustment]
0757	Other Configurations[VP027 Program Clutch 1 Adjustment]
0758	Other Configurations[VP028 Program Clutch 2 Adjustment]
0759	Other Configurations[VP029 Memorisation Of Speeds]
0760	Other Configurations[VP030 Chassis Wear Programming]
0761	Other Configurations[VP030 Gearbox Vehicle Acceleration Sensor Init.]
0762	Other Configurations[VP031 Hydraulic Brake Compensation]
0763	Other Configurations[VP032 Automatic Gearbox Control]
0764	Other Configurations[VP032 Eeprom Memory Write Procedure]
0765	Other Configurations[VP032 Multiplexed Network Configuration]
0766	Other Configurations[VP032 Veh. Speed At Initialisation]
0767	Other Configurations[VP035 High Pressure Pump Counter]
0768	Other Configurations[VP035 Modus Fuel Sender Calibration (Europe)]
0769	Other Configurations[VP035 Parametrage Prive 5]
0770	Other Configurations[VP035 Stop Electrical Consumer Prevention]
0771	Other Configurations[VP036 Fuel Supply Prevention]
0772	Other Configurations[VP036 Modus Long Fuel Sender Calibration (Europe)]
0774	Other Configurations[VP036 Steering Angle Sensor Initialisation]
0775	Other Configurations[VP037 Maintenance Autonomy Interval In Km]
0776	Other Configurations[VP037 Stop Fuel Supply Prevention]
0777	Other Configurations[VP038 Longitudinal Acceleration Sensor]
0778	Other Configurations[VP038 Van Fast Idle Speed Increase]
0779	Other Configurations[VP039 Computer Initialisation]
0780	Other Configurations[VP039 Maintenance Autonomy Interval In Months]
0781	Other Configurations[VP039 Van Fast Idle Speed Decrease]
0782	Other Configurations[VP040 Maintenance Autonomy:Current Value In Km]
0783	Other Configurations[VP040 Particle Filter Regeneration]
0784	Other Configurations[VP042 Maintenance Autonomy:Current Value Month]
0785	Other Configurations[VP043 Improved Grip Function]
0786	Other Configurations[VP044 Acceleration Sensor]
0787	Other Configurations[VP045 Hill Start]
0788	Other Configurations[VP046 Front Wheel Circumference]
0789	Other Configurations[VP047 Lcd Display Fuel Gauge Calibration]
0790	Other Configurations[VP047 Parametrage Prive 15]
0791	Other Configurations[VP047 Rear Wheel Circumference]
0792	Other Configurations[VP048 Analogic Display Fuel Gauge Calibration]

0793	Other Configurations[VP048 Driving Type]
0794	Other Configurations[VP050 Adblue First Filling Test]
0795	Other Configurations[VP051 Adblue Emptying Test]
0796	Other Configurations[VP051 Tyre Pressure Monitor Function]
0797	Other Configurations[VP052 Flow Rate Function]
0798	Other Configurations[VP052 Vacuum Pump]
0799	Other Configurations[VP053 Conformity Check]
0800	Other Configurations[VP054 Activate Maintenance Mode]
0801	Other Configurations[VP055 Adblue Injector Release Test]
0802	Other Configurations[VP055 Deactivate Maintenance Mode]
0803	Other Configurations[VP056 Adblue Injector Sound Test]
0804	Other Configurations[VP056 Fuel Gauge Calibration Lcd (Japan)]
0805	Other Configurations[VP057 Commission Automatic Application]
0806	Other Configurations[VP057 Fuel Gauge Calibration Needle (Japan)]
0807	Other Configurations[VP057 Idle Air Volume Learning - Factory Mode]
0808	Other Configurations[VP058 Idle Air Volume Learning - Service Mode]
0809	Other Configurations[VP058 Lcd Display Fuel Gauge Calibration]
0810	Other Configurations[VP059 Lcd Display Fuel Gauge Calibration]
0811	Other Configurations[VP060 Analogic Display Fuel Gauge Calibration]
0812	Other Configurations[VP061 Analogic Display Fuel Gauge Calibration]
0814	Other Configurations[VP064 Ignition Timing Adjustment]
0815	Other Configurations[VP064 Lcd Display Fuel Gauge Calibration]
0816	Other Configurations[VP065 Lcd Display Fuel Gauge Calibration]
0817	Other Configurations[VP066 Analogic Display Fuel Gauge Calibration]
0818	Other Configurations[VP067 Analogic Display Fuel Gauge Calibration]
0819	Other Configurations[VP067 Static Test]
0820	Other Configurations[VP068 Computer Configuration]
0821	Other Configurations[VP069 Catalytic Converter Test]
0822	Other Configurations[VP070 Air Path Programming]
0823	Other Configurations[VP072 Pump Pressure Regulator Type]
0824	Other Configurations[VP073 Fuel Pump Forced Conversion]
0825	Other Configurations[VP073 Reset Oil Change Counter]
0826	Other Configurations[VP153 Parametrage Prive 98]
0827	Other Configurations[VP214 Parametrage Prive 159]
0828	Other Configurations[VP215 Parametrage Prive 160]
0829	Other Configurations[VP266 Parametrage Prive 211]
0830	Other Configurations[VP267 Parametrage Prive 212]
0831	Other Configurations[VP292 Parametrage Prive 237]
0832	Other Configurations[VP293 Parametrage Prive 238]
0833	Other Configurations[VP294 Parametrage Prive 239]
0834	Other Configurations[VP295 Parametrage Prive 240]
0835	Other Configurations[VP305 Parametrage Prive 250]
0836	Other Configurations[VP306 Number Of Starting 1]
0837	Other Configurations[VP307 Number Of Starting 2]
0838	Other Configurations[VP308 Number Of Starting 3]

0839	Other Configurations[VP309 Number Of Starting 4]
0840	Other Configurations[VP310 Alternator Setpoint Voltage]
0841	Other Configurations[VP342 Vacuum Pump Operation Request]
0842	Other Configurations[VP343 Number Of Starting Cycles]
0843	Other Configurations[VP344 High Pressure Pump Counter]
0844	Other Configurations[VP383 Memorisation Of Speeds]
0845	Other Configurations[VP384 Driver Start Counter]
0846	Other Configurations[VP385 Idle Stop And Start Counter]
0847	Other Configurations[VP386 Vacuum Pump Operation Request]
0848	Other Configurations[VP387 Vacuum Pump Operation Request]
0849	Other Configurations[VP388 Inverter Activation Request]
0850	Other Configurations[VP389 Dcdc Setpoint Voltage]
0851	Other Configurations[VP390 Manual Gear Position]
0852	Other Configurations[VP399 New Vehicle Storage Mode Deactivation]