HUMZORSUZUKI Function list V16.10						
Notes						
√	Functions marked with ✓ is fully supported and already exited in former software version.					
	Functions left with blank is not supported.					

Vehicle	Mode	ECU informatio	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test S	Special Functions
	ENG	√	√	√	<b>√</b>	N	Misc Test
	AT/CVT	√	√	√	<b>√</b>		
	ABS/ESP	√	√	√	√		
	EPS	√	√	√	√		
	SRS	√	√	√	√		
	AC	√	√	√	√		
	BCM	√	√	√	√	N	Misc Test
	4WD	√	√	√	√		
	EMCD	√	√	√			
	EV_MOTOR	√	√	√			